

33.2.8.5.1 PSE pair-to-pair current unbalance

This section describes unbalance requirements for Type 3 and Type 4 PSEs that operate over 4-pair. The PSE PI pair-to-pair effective resistance unbalance contributes to the effective system end-to-end resistance unbalance as specified in Annex 33B.

A compliant unbalanced load, R_{load_min} and R_{load_max} , consists of the channel (cables and connectors) and PD effective resistances, including the effects (or influence) of system end-to-end unbalance.

Figure 33–X shows a test circuit for the current unbalance requirements measurement, illustrating the relationship between current unbalance at the PSE PI (I_{a+} , I_{b+} , I_{a-} , I_{b-}), and R_{load_min} and R_{load_max} as specified in Table 33–X.

Current unbalance requirements ($I_{Con-2P-usb}$) of a PSE shall be met with R_{load_max} and R_{load_min} as specified by Table 33–X.

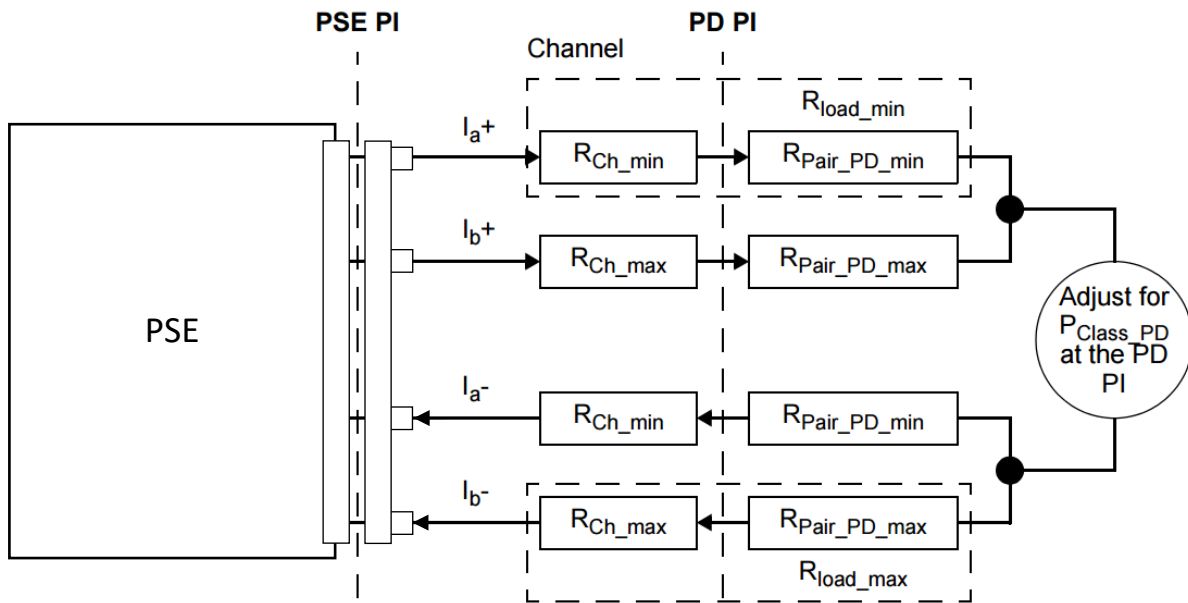


Figure 33– X—PSE unbalance evaluation model

Table 33– X— R_{load_max} and R_{load_min} requirements

PSE Class	R_{Ch_min} (Ω)	R_{Ch_max} (Ω)	$R_{Pair_PD_min}$ (Ω)	$R_{Pair_PD_max}$ (Ω)	R_{load_min} (Ω)	R_{load_max} (Ω)	Additional information
5	0.087	0.1	0.636	1.528	0.723	1.628	R _{load} is at low channel resistance conditions
6	0.087	0.1	0.536	1.189	0.623	1.289	
7	0.087	0.1	0.503	0.990	0.590	1.090	
8	0.087	0.1	0.457	0.875	0.544	0.975	
5	TBD	TBD	TBD	TBD	5.920	7.190	R _{load} is at high channel resistance conditions
6	TBD	TBD	TBD	TBD	5.780	7.000	
7	TBD	TBD	TBD	TBD	5.710	6.870	
8	TBD	TBD	TBD	TBD	5.650	6.790	

The current unbalance test method is described below:

- 1) Use R_{load_min} and R_{load_max} from Table 33–X for R_{load} at low channel resistance conditions.
- 2) With the PSE powered on, adjust the load to P_{Class_PD} at the PD PI.
- 3) Measure I_{a+} , I_{b+} .
- 4) Swap R_{load_max} , R_{load_min} , repeat steps 2 and 3.
- 5) Repeat steps 2 to 4 for I_{a-} , I_{b-} .
- 6) Verify that the current in each case does not exceed $I_{Con-2P-unb}$ minimum in Table 33–18.
- 7) Repeat steps 2 to 6 for R_{load_min} and R_{load_max} from Table 33–X for R_{load} at high channel resistance conditions.

Annex 33B

(informative)

PSE PI pair-to-pair resistance/current unbalance

33B.1 Introduction

End to end pair-to-pair resistance/current unbalance (E2EP2PUnb) refers to current differences in powered pairs of the same polarity. Current unbalance can occur in positive and negative powered pairs when a PSE uses all four pairs to deliver power to a PD.

Lower R_{PSE_max} than required by Equation (33B–1) is obtained by using smaller constant α and larger constant β in the equation $R_{PSE_max} = \alpha \times R_{PSE_min} + \beta$.

Equation (33B–1), specified for the PSE, assures that E2EP2PUnb will be met in the presence of all compliant unbalanced loads (R_{load_min} and R_{load_max}) attached to the PSE PI.

The PSE PI pair-to-pair effective resistance unbalance determined by R_{PSE_max} and R_{PSE_min} ensures that along with any other parts of the system, i.e. channel (cables and connectors) and the PD, the maximum pair current including unbalance does not exceed $I_{Con-2P-unb}$ as defined in Table 33–18 during normal operating conditions. $I_{Con-2P-unb}$ is the current in the pairset with the highest current in case of maximum unbalance and will be higher than $I_{Con}/2$.

R_{PSE_max} and R_{PSE_min} are specified and measured under maximum P_{Class} sourcing conditions. The following design guidelines may be implemented to ensure PSE PI pair-to-pair current unbalance requirements are met:

$$R_{PSE_max} = \begin{cases} 2.200 \times R_{PSE_min} - 0.040 & \text{for Class 5} \\ 2.010 \times R_{PSE_min} - 0.040 & \text{for Class 6} \\ 1.800 \times R_{PSE_min} - 0.030 & \text{for Class 7} \\ 1.750 \times R_{PSE_min} - 0.030 & \text{for Class 8} \end{cases} \Omega \quad (33B-1)$$

where

R_{PSE_max} is, given R_{PSE_min} , the highest allowable common mode effective resistance in the powered pairs of the same polarity

R_{PSE_min} is the lower PSE common mode effective resistance in the powered pairs of the same polarity

The values of R_{PSE_max} and R_{PSE_min} are implementation specific and need to satisfy Equation (33B–1). A PSE which uses current balancing methods which effectively using lower R_{PSE_max} than required by Equation (33B–1) and meets $I_{Con-2P-unb}$ requirements by definition also meets Equation (33B–1). See 33.2.8.5.1 for PSE unbalance requirements and PSE unbalance measurement method.

Figure 33B-1 illustrates the relationship between effective resistances at the PSE PI as specified by Equation (33B-1) and end-to-end pair-to-pair resistance.

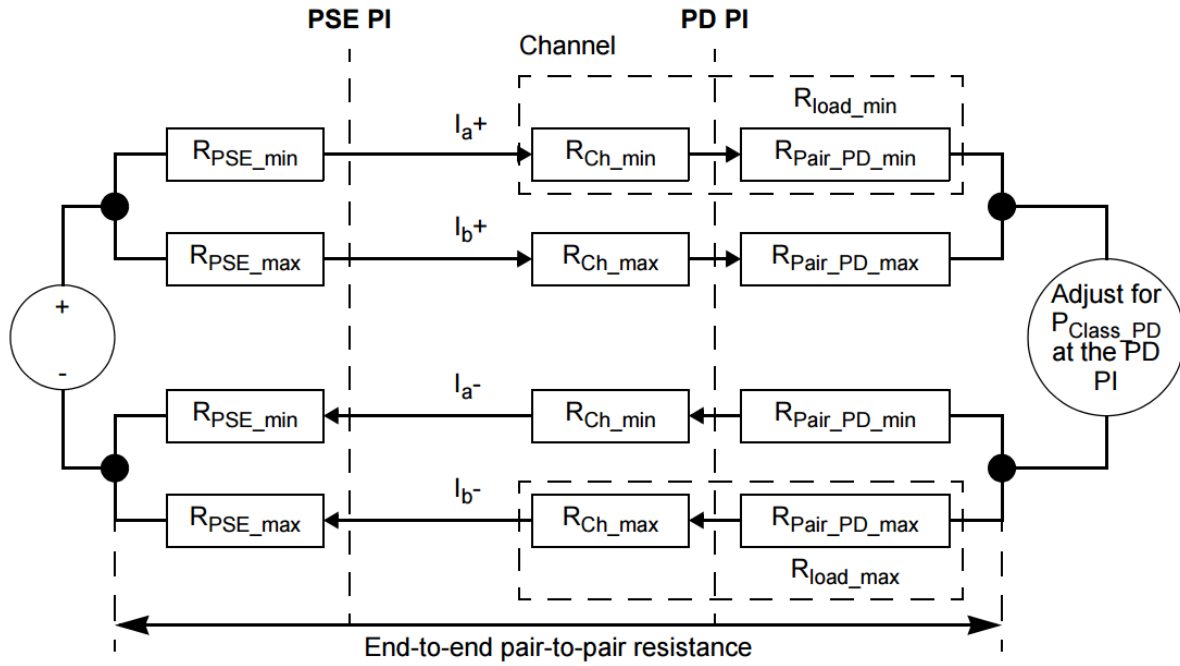


Figure 33B- 1—PSE PI unbalance specification

33B.2 Direct R_{PSE} measurement

If there is access to internal circuits, effective resistance may be determined by sourcing current in each path corresponding to maximum P_{Class} operation, and measuring the voltage across all components that contribute to the effective resistance, including circuit board traces and all components passing current to the PSE PI output connection. The effective resistance is the measured voltage V_{eff} , divided by the current through the path e.g. the effective value of R_{PSE_min} for i_1 is $R_{PSE_min} = V_{eff1}/i_1$ as shown in Figure 33B–2.

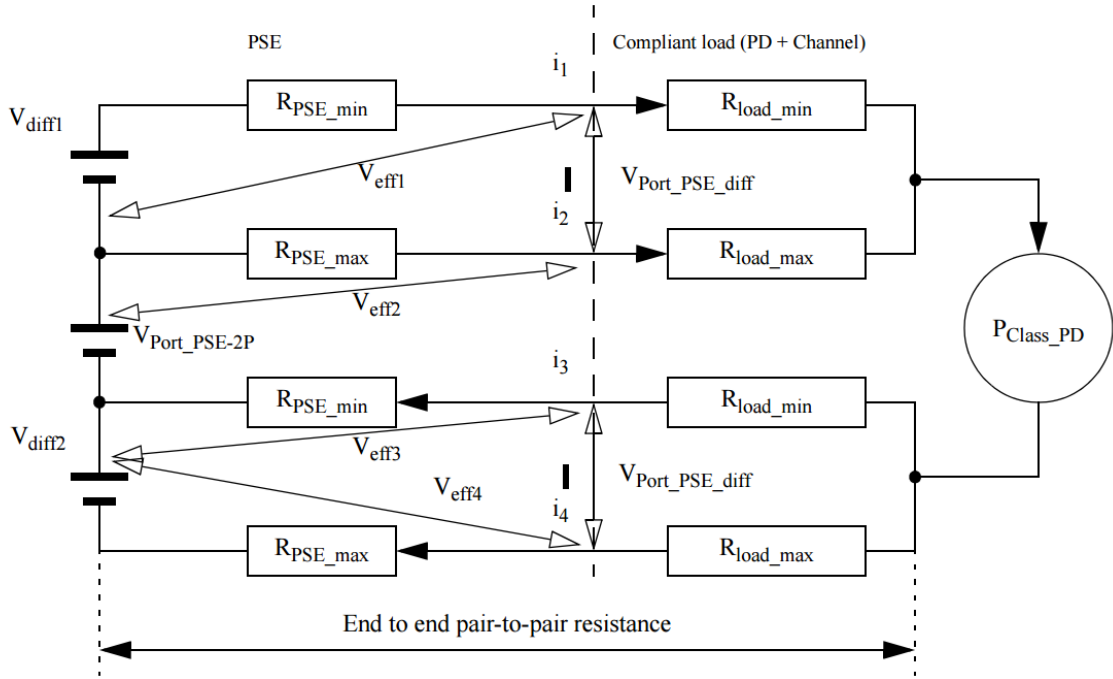


Figure 33B– 2—Direct measurements of effective R_{PSE_max} and R_{PSE_min}

33B.3 Effective resistance R_{PSE} measurement

Figure 33B–3 shows a possible test circuit for effective resistance measurements on a PSE port for evaluating conformance to Equation (33B–1) if the internal circuits are not accessible. In Figure 33B–3, the positive pairs of the same polarity are shown as an example. The same concept applies to the negative pairs.

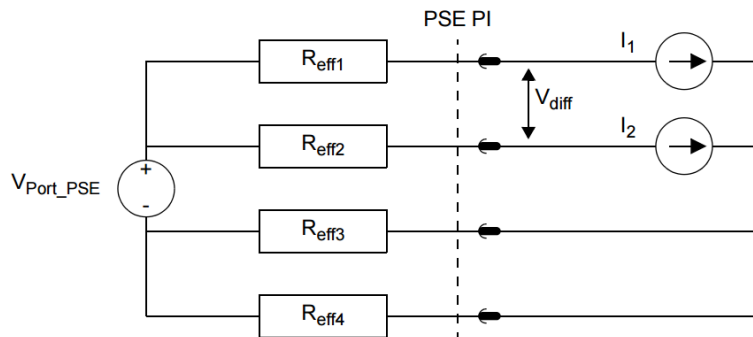


Figure 33B– 3—Effective resistance test circuit

The effective resistance test procedure is described below:

- 1) With the PSE powered on, set the following current values
 - a. $10 \text{ mA} < I_2 < 50 \text{ mA}$
 - b. $I_1 = 0.5 \times (P_{\text{max}}/V_{\text{port}}) - I_2$
- 2) Measure V_{diff} .
- 3) Reduce I_1 by 20% ($=I_1'$). Ensure I_2 remains unchanged.
- 4) Measure V_{diff}' in the same manner as V_{diff} .
- 5) Calculate R_{eff1} : $R_{\text{eff1}} = [(V_{\text{diff}}) - (V_{\text{diff}}')] / (I_1 - I_1')$
- 7) Repeat procedure for R_{eff2} , with I_1, I_2 values swapped.
- 8) Repeat procedure for $R_{\text{eff3}}, R_{\text{eff4}}$.
- 9) Evaluate compliance of R_{eff1} and R_{eff2} with Equation (33B-1). Evaluate compliance of R_{eff3} , and R_{eff4} with Equation (33B-1).