

77.3.3.2 Variables

Insert a new variable “register_nack“ after variable “registered”, with the following definition

register_nack

TYPE: Boolean

This variable indicates whether registration was denied by ONU DBA client. It is set to true in NACK state in [Figure 77-23](#) and set to false in REGISTER_ACK state in [Figure 77-23](#).

VALUE: false (default)

77.3.3.5 State diagram

Replace Figure 77-23 with Figure 77-23 presented below

77.3.5.2 Variables

Insert a new variable “register_nack“ after variable “registered”, with the following definition

register_nack

This variable is defined in defined in [77.3.3.2](#).

77.3.5.6 State Diagrams

Replace Figure 77-29 with Figure 77-29 presented below

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54

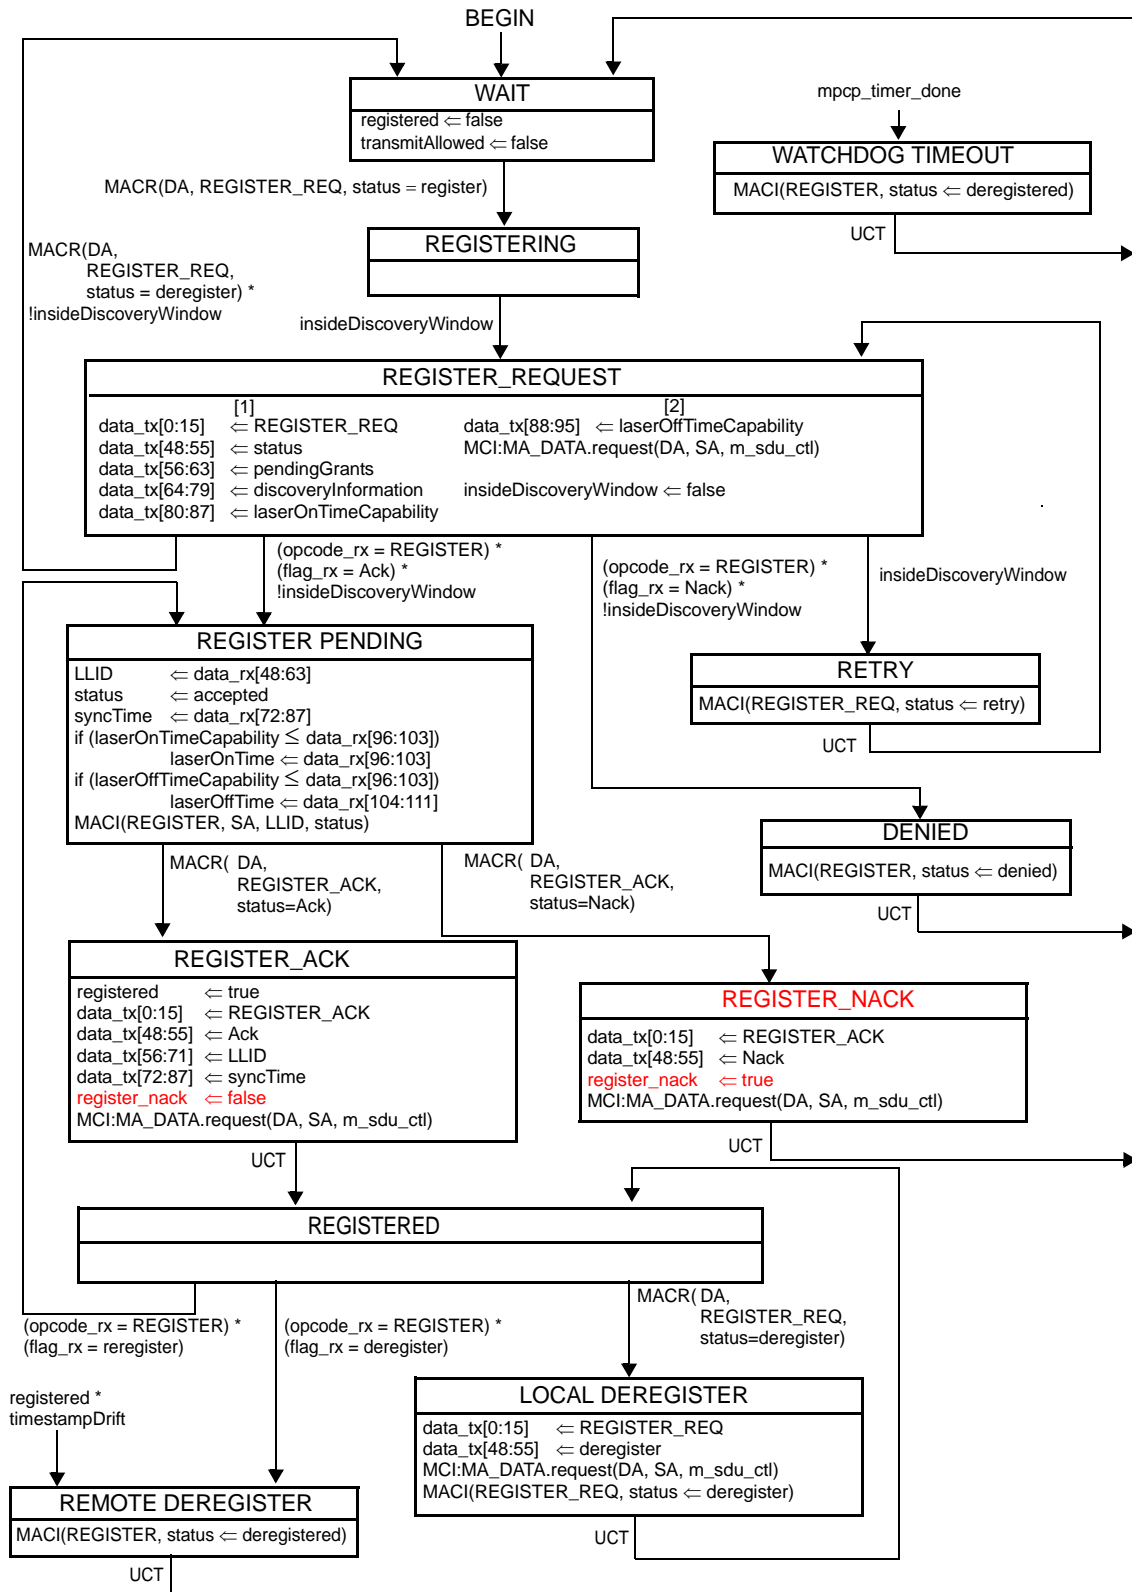


Figure 77–23—Discovery Processing ONU Registration state diagram

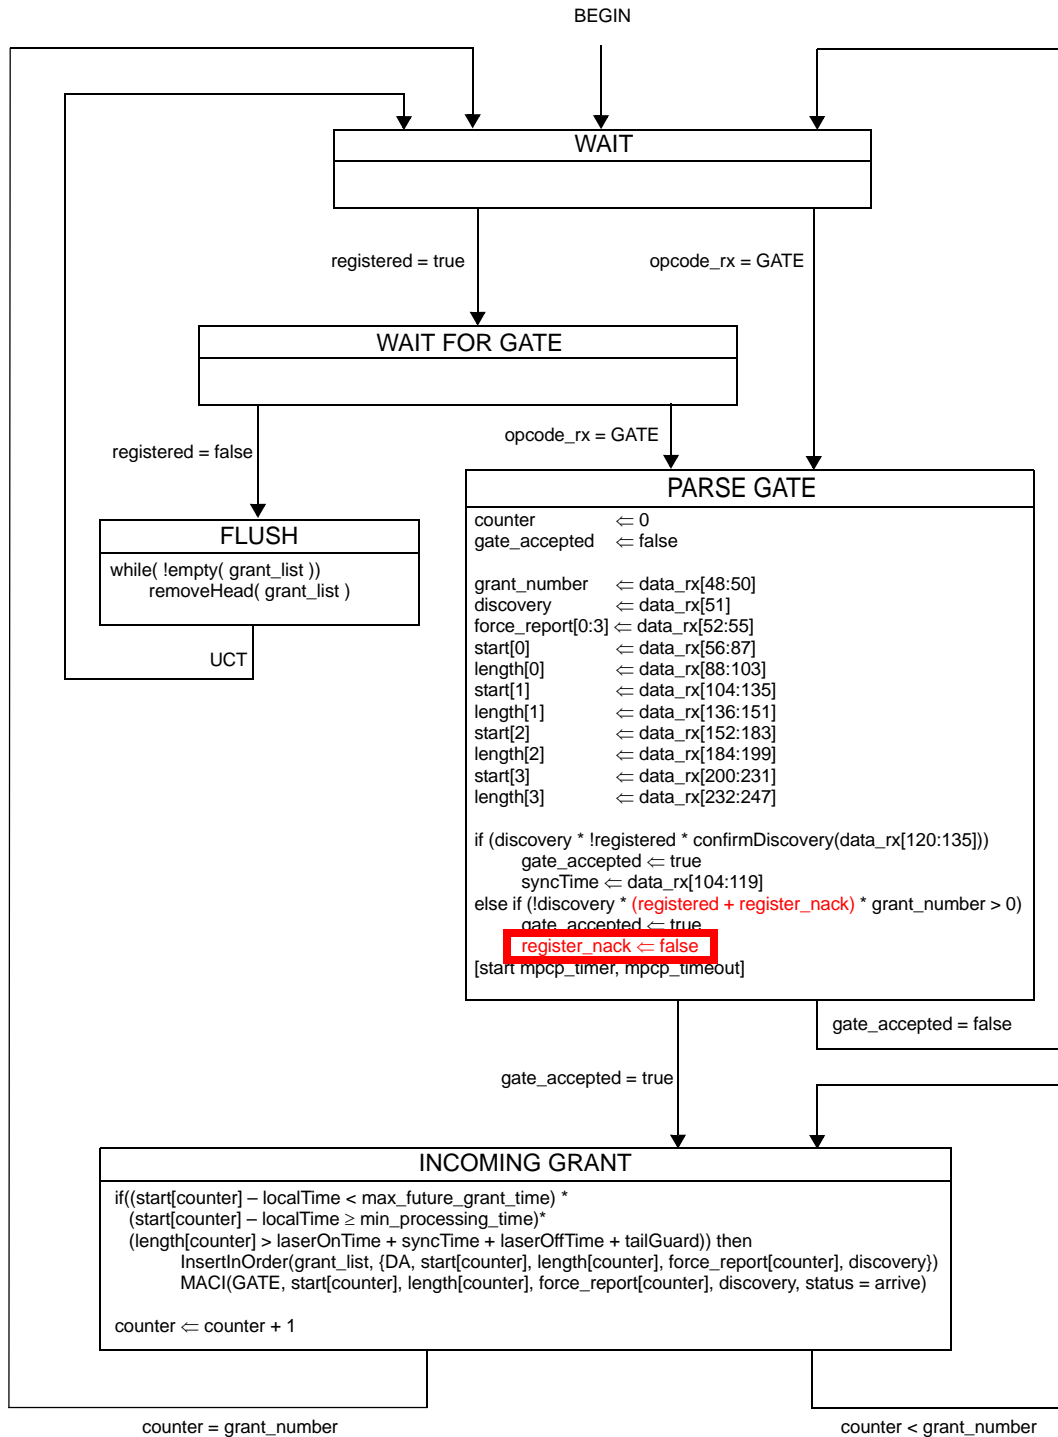


Figure 77–29—Gate Processing ONU Programming state diagram

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54