

GetFillerEQ(int col)

The GetFillerEQ() function returns an EQ value used to fill the transmit channel when no active envelopes are available. If this function is called when the transmission channel is active, it returns an inter-envelope idle EQ (IEI_EQ). Otherwise, it returns an inter-burst idle EQ (IBI_EQ).

```
EQ GetFillerEQ( int col )
{
    if( TxActive[col] )
        return IEI_EQ; //Inter-Envelope Idle
    else
        return IBI_EQ; //Inter-Burst Idle
}
```