802.3da EEE Support Draft Text

12 July 2023 - Berlin

Contents

Terms and Definitions

Network segment states:

Quiet Mixing Segment	A multidrop network segment in which there is no activity on the physical medium.
Partial Mixing Segment	A multidrop network segment with at least one node transmitting on the physical medium. (Including PLCA beacons)

22 Reconciliation Sublayer (RS) and Media Independent Interface (MII)

22.2 Functional specifications

22.2.2 MII signal functional specifications

22.2.2.4 TXD (transmit data)

Insert the following paragraph after the third paragraph in 22.2.2.4 as follows:

When low power wake-up signaling capability is supported and enabled, the RS shall use a combination of TX_EN deasserted, TX_ER asserted, and TXD<3:0> equal to 0100 as shown in Table 22-1 to send WUPRQ as defined in 148.4.4.

Modify the fourth paragraph in 22.2.2.4 as follows:

When TX_EN is deasserted and TX_ER is asserted, values of TXD<3:0> other than 0001, 0010, ~~and~~ 0011, and 0100 shall have no effect upon the PHY.

Change Table 22-1 as follows (unchanged rows not shown):

Table 22-1—Permissible encodings of TXD<3:0>, TX_EN, and TX_ER

TX_EN	TX_ER	TXD<3:0>	Indication
…			
0	1	0100	WUPRQ request
0	1	~~0100~~0101 through 1111	Reserved
…			

22.2.2.8 RXD (receive data)

Insert the following paragraph into 22.2.2.8 after the fourth paragraph:

When low power wake-up signaling is supported and enabled, the PHY indicates that it is receiving a SUSPEND by asserting the RX_ER signal and driving the value 0100 on RXD<3:0> while RX_DV is de-asserted. See 148.4.7 for the definition and usage of SUSPEND.

Change Table 22-2 as follows (unchanged rows not shown):

Table 22-2--Permissible encoding of RXD<3:0>, RX_ER, and RX_DV

RX_DV	RX_ER	RXD<3:0>	Indication
…			
0	1	0100	SUSPEND indication
0	1	~~0100~~0101 through 1111	Reserved
…			

147 Physical Coding Sublayer (PCS), Physical Medium Attachment (PMA) sublayer and baseband medium, type 10BASE-T1S

147.2 Service primitives and interfaces

Update Figure 147-2—10BASE-T1S PHY interfaces with this one.

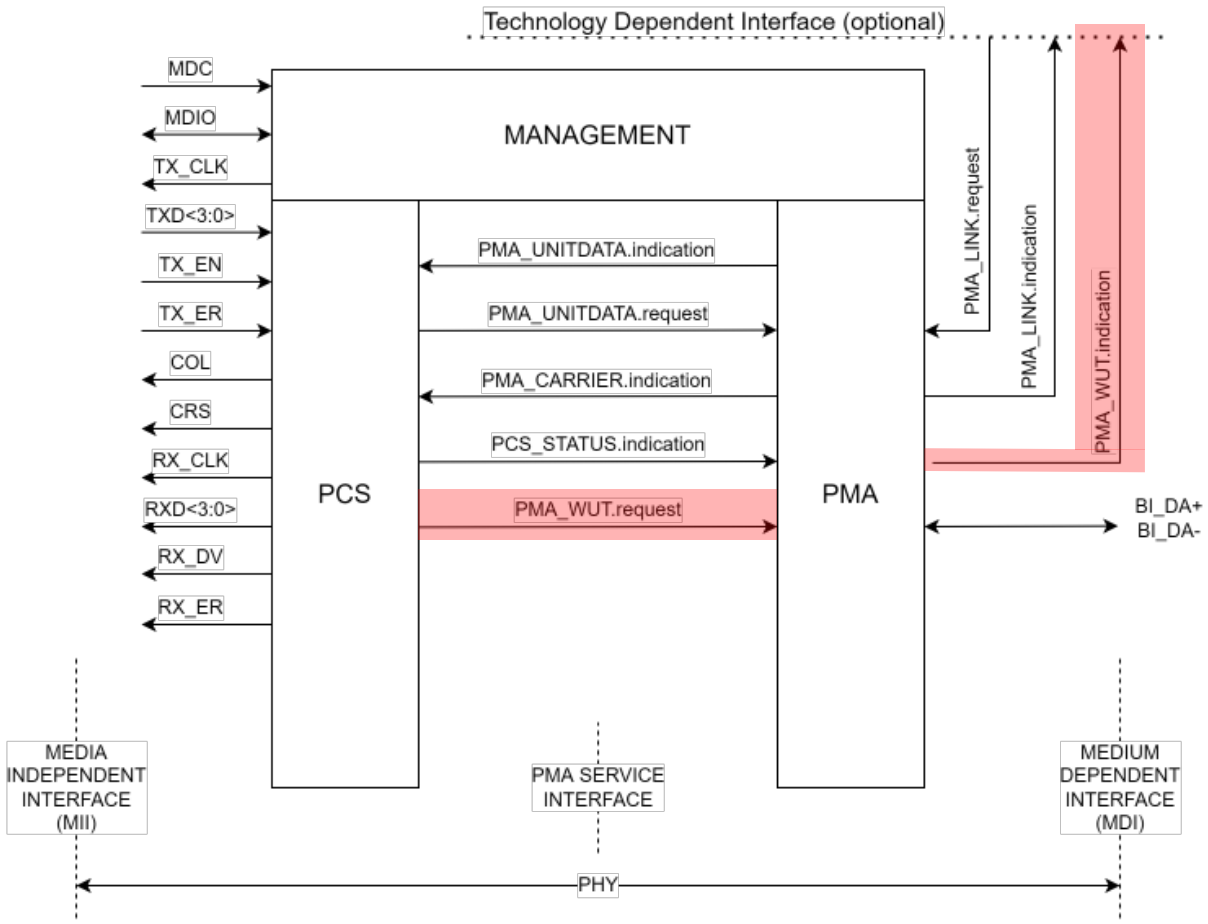

Figure 147-2—10BASE-T1S PHY interfaces

Add below items to list of service primitives:

PMA_WUT.request(transmit_wut)
PMA_WUT.indication(status)

Add description of new primitives:

147.2.7 PMA_WUT.request

This primitive is generated by the PCS to request the PMA to transmit a WUT.

147.2.7.1 Semantics of the primitive

PMA_WUT.request(transmit_wut)

The transmit_wut parameter can take on one of the following two values:

FALSE	Transmission of a WUT on the medium is not requested
TRUE	Transmission of a WUT on the medium is requested

147.2.7.2 When generated

PCS transmit generates this primitive to indicate a change in transmit_wut.

147.2.7.3 Effect of receipt

The effect of receipt of this primitive is specified in 147.4.2.

147.2.8 PMA_WUT.indication

Reports when a signal compatible with WUT specified in 147.Y is detected on the medium.

147.2.8.1 Semantics of the primitive

PMA_WUT.indication(status)

The status parameter can take on the following two values:

NOT_DETECTED	PMA is not receiving a valid WUT from a remote PHY
DETECTED	PMA is receiving a valid WUT from a remote PHY

147.2.8.2 When generated

The PMA generates this primitive to indicate a change in status of the WUT presence detection on the medium.

147.2.8.3 Effect of receipt

The effect of receipt of this primitive is implementation specific

147.3 Physical Coding Sublayer (PCS) Functions

147.3.1 PCS Reset function

Replace figure 147-3 with the following.

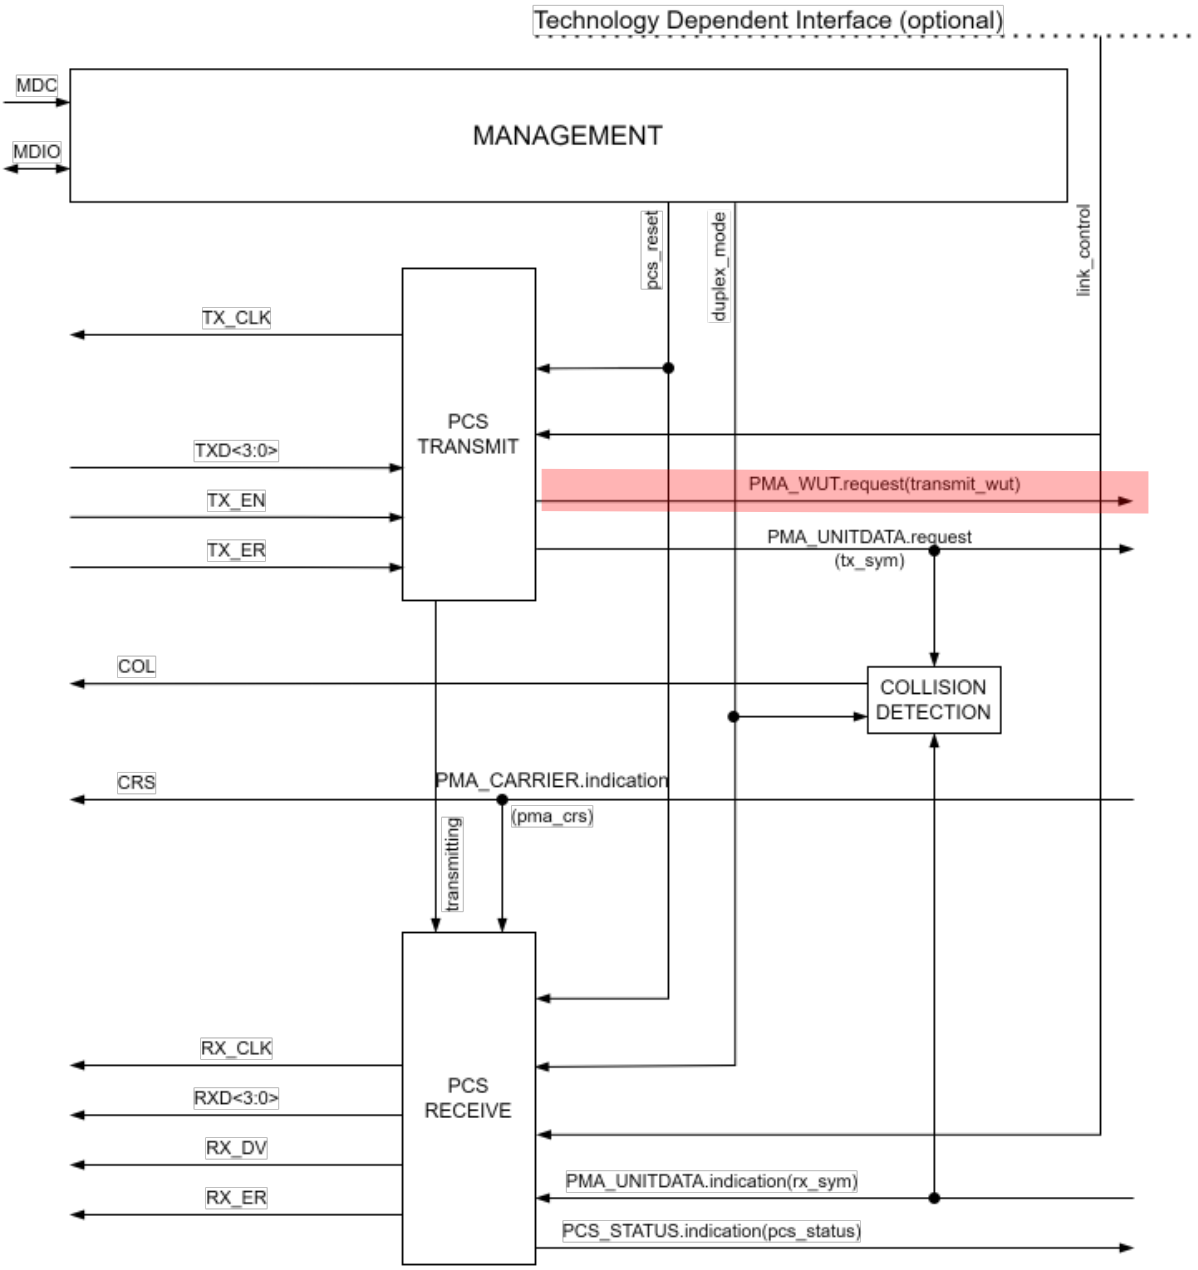

Figure 147-3--PCS reference diagram

147.3.2 PCS Transmit

147.3.2.1 PCS Transmit overview

Add the following text after last paragraph in this section:

When low power functionality is supported and the wut_transmit variable changes, it shall be conveyed to the PMA through PMA_WUT.request primitive.

147.3.2.2 Variables

Replace existing variable descriptions with descriptions below.

link_control

This variable is generated by the Auto-Negotiation function. When Auto-Negotiation is not present or Auto-Negotiation is disabled, link_control has a default value of ENABLE, and may be provided by implementation-dependent functionality. When low power functionality is present this variable may be controlled by the power state function. When set to DISABLE, all PCS functions are switched off and no data can be sent or received.

Values: ENABLE or DISABLE

Add these variables to the end of the variable list:

suspend_cnt

This variable is used to count the number of symbols transmitted during SUSPEND

wut_cnt

This variable is used to dimension the duration of WUT transmitted during WUP

wut_transmit

Value of a wake-up tone transmission request to be conveyed to PMA via the PMA_WUT.request primitive.

147.3.2.4 Functions

Change Table 147-1 as follows (unchanged rows not shown):

Table 147-1--4B/5B Encoding

RX_DV	RX_ER	RXD<3:0>	Indication
…			
T	N/A	01101	ESD/HB/SUSPEND
…			

147.3.2.5 State diagram

Replace figure 147-4—PCS Transmit state diagram, part a

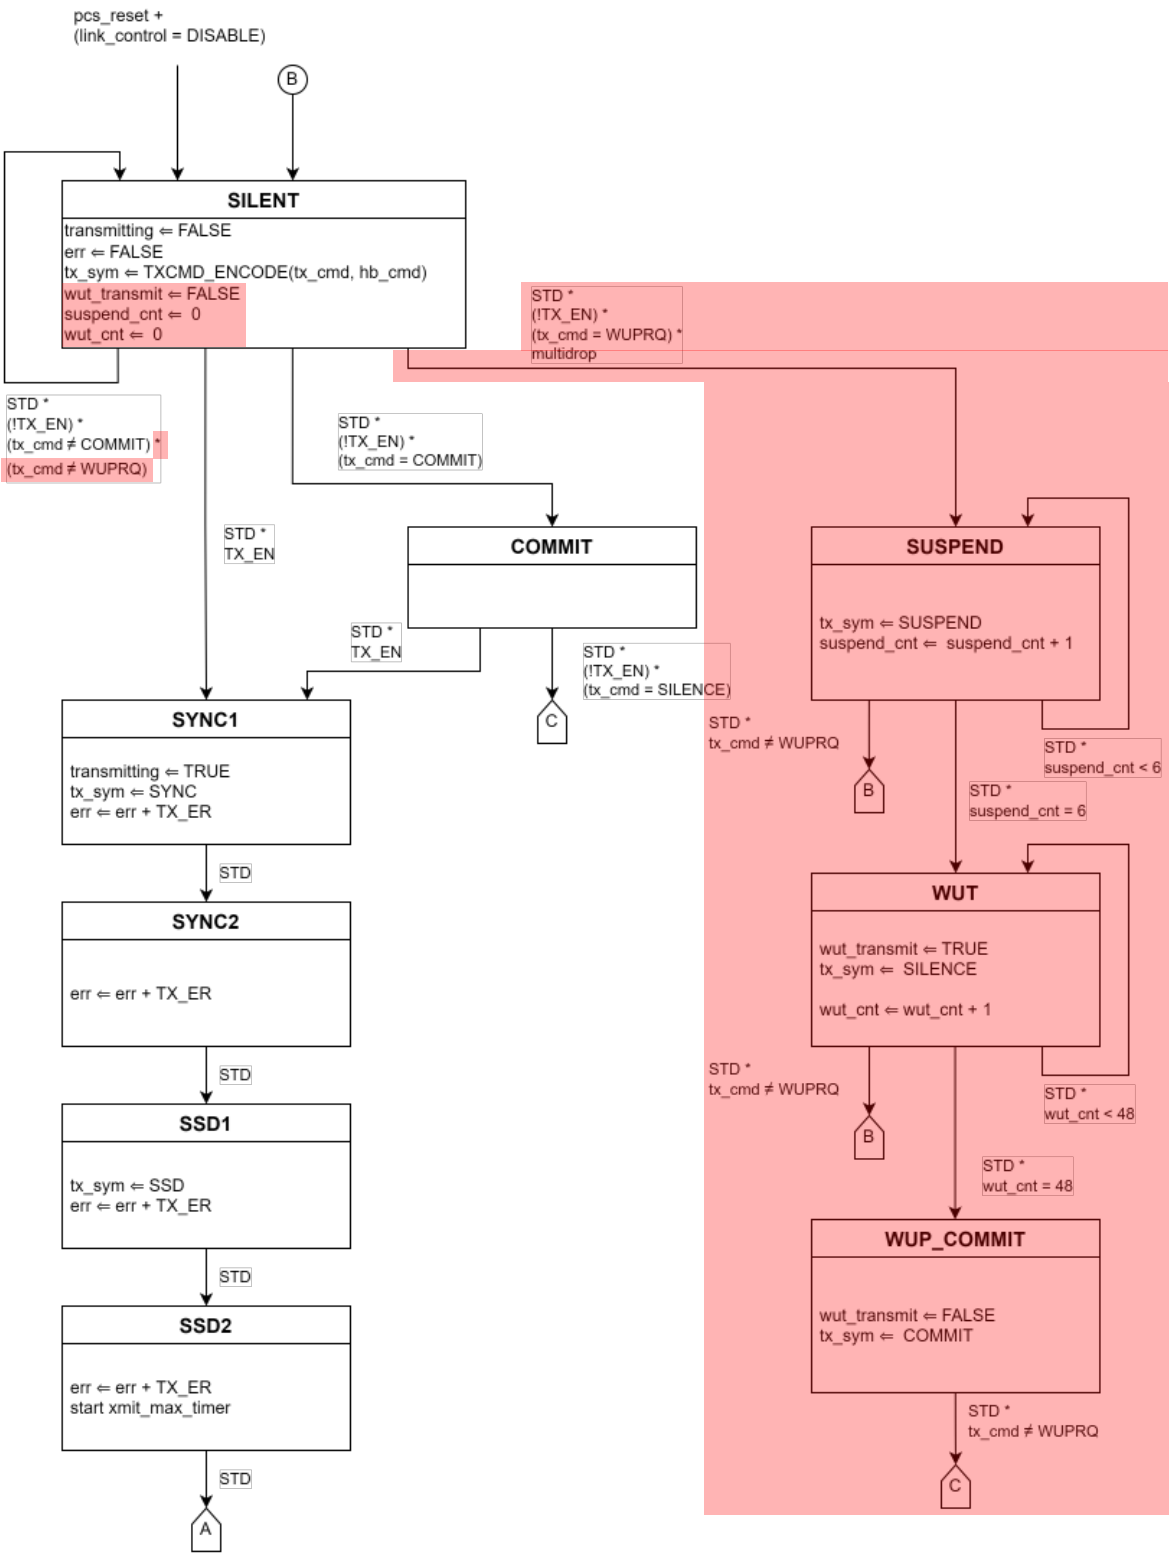

Figure 147-4--PCS Transmit state diagram, part a

147.3.3 PCS Receive

147.3.3.1 PCS Receive Overview

Modify the fifth paragraph as follows.

During the WAIT_SYNC state, the PCS notifies the RS of a received BEACON indication by the means of the MII as specified in 22.2.2.8. When a sequence of at least two consecutive 'N' symbols is received, the MII signals RX_DV, RX_ER, and RXD<3:0> are set to the BEACON indication as shown in Table 22–2. Additionally, the PCS notifies the RS of a received COMMIT or SUSPEND indication by the means of the MII as specified in 22.2.2.8. When a sequence of at least two consecutive SYNC is received, the MII signals RX_DV, RX_ER, and RXD<3:0> are set to the COMMIT indication as shown in Table 22–2. When a sequence of at least two consecutive SUSPEND is received in a multidrop configuration, the MII signals RX_DV, RX_ER, and RXD<3:0> are set to SUSPEND indication as shown in Table 22-2.

147.3.3.7 State diagrams

Add the additional exit path from the WAIT_SYNC state of PCS Receive state diagram, part a (Figure 147-7) as shown.

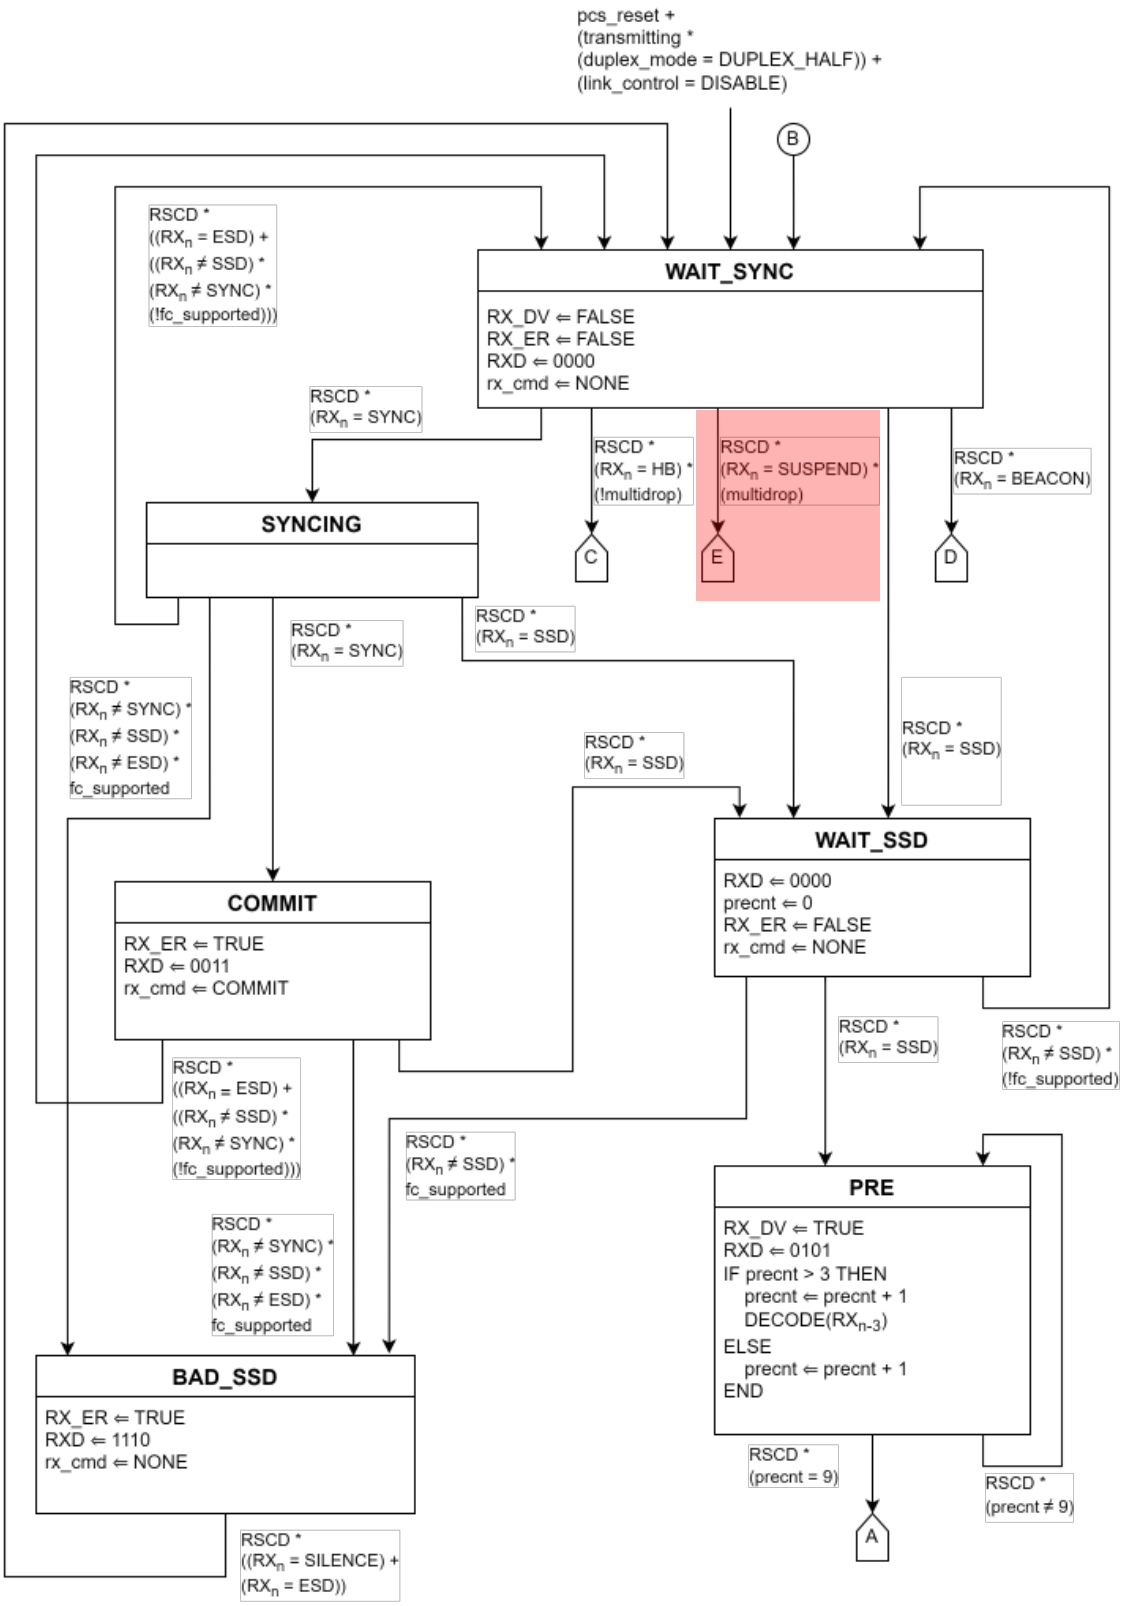

Figure 147-7--PCS Receive state diagram, part a

Add the additional SUSPEND and SUSPEND2 states to PCS Receive state diagram, part b (Figure 147-8) as shown.

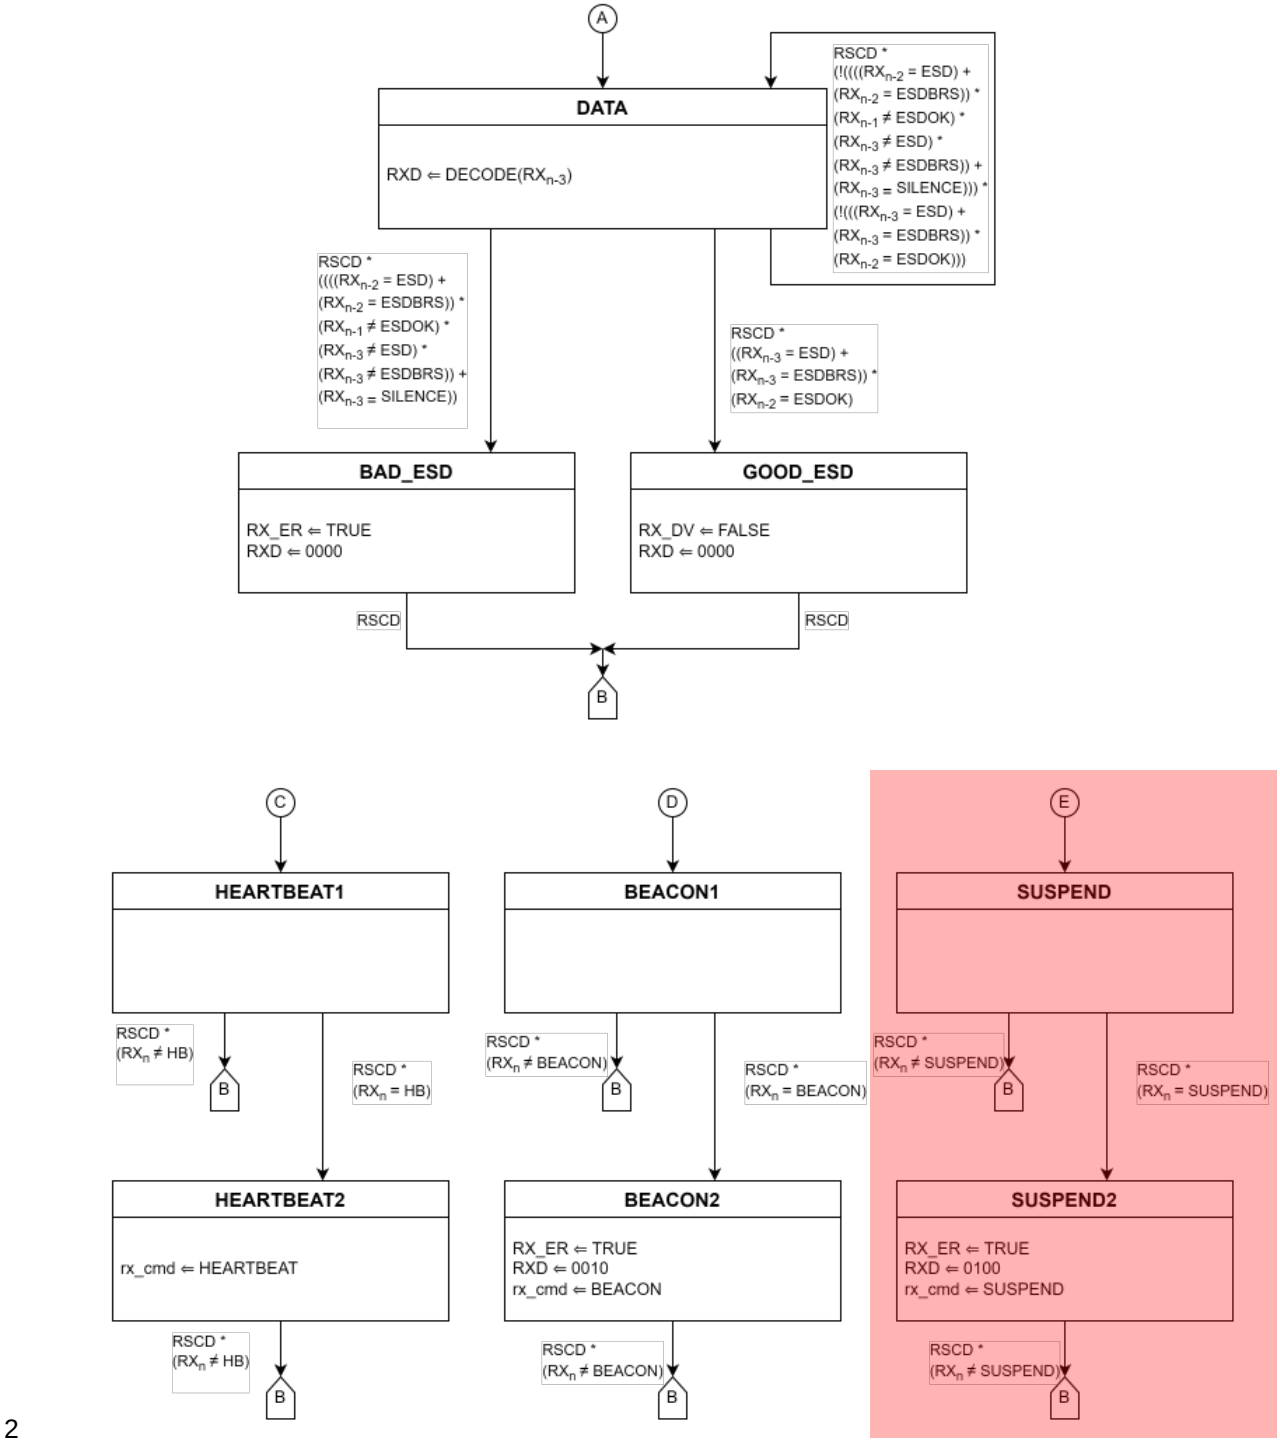

Figure 147-8--PCS Receive state diagram, part b

147.4 Physical Medium Attachment (PMA) sublayer

Replace PMA functional block diagram Figure 147-12 as below:

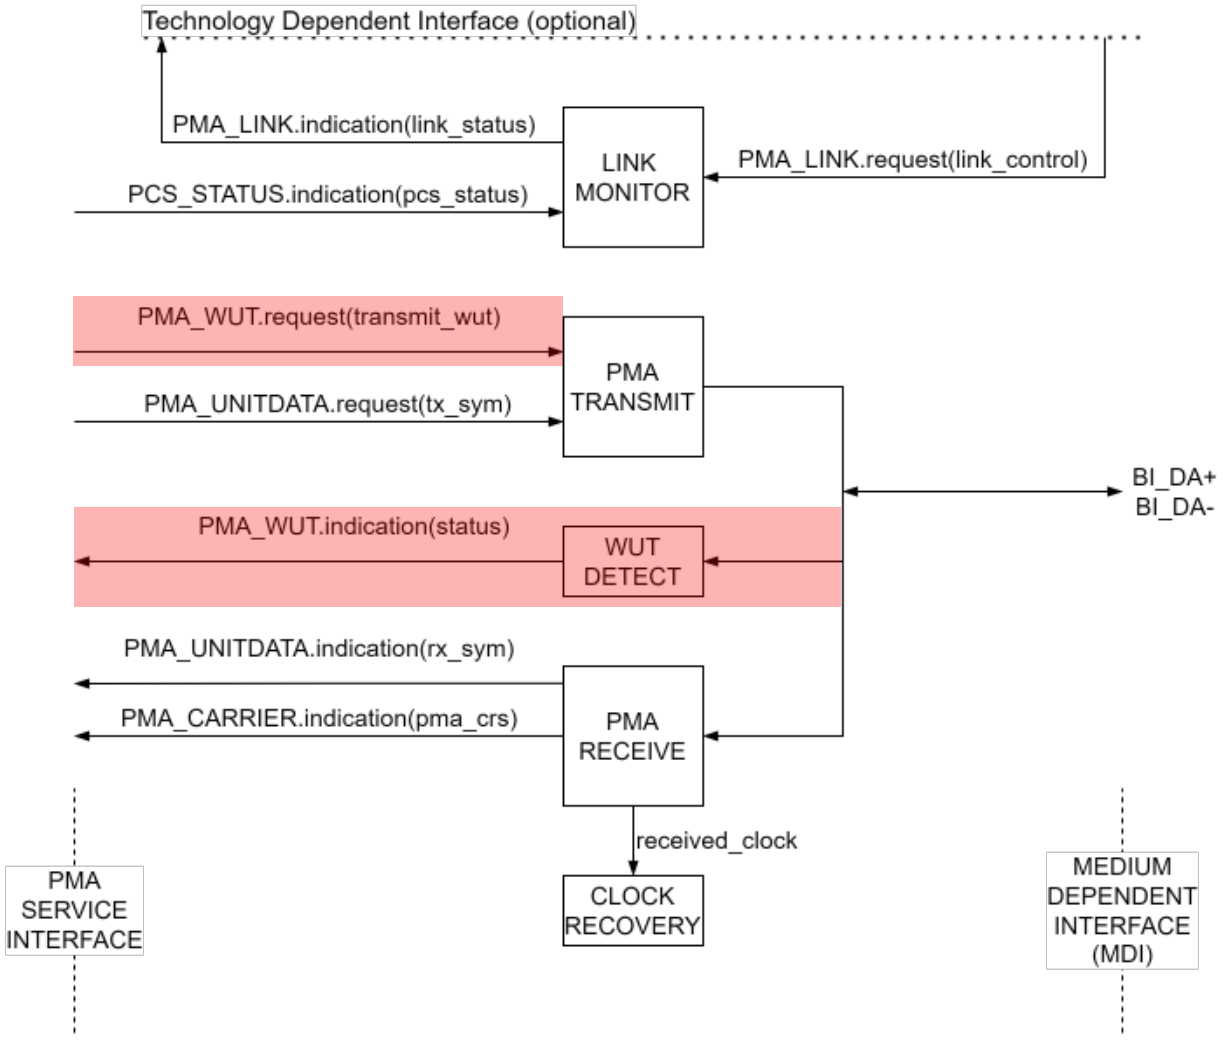

Figure 147-12--PMA functional block diagram

147.4.2 PMA Transmit function

Modify the opening sentence

During transmission, if PMA_WUT.request is inactive (most recent request had transmit_wut parameter set to FALSE), PMA_UNITDATA.request conveys the tx_sym variable to the PMA.

Add the following text to the end of section 147.4.2

If a PMA_WUT.request is active (most recent request had transmit_wut parameter set to TRUE) then it shall transmit a single frequency tone on BI_DA as per the timing outlined below.

Figure 147-14--WUT encoding

Table 147-2--Table 147-3--WUT timings

Parameter name	Description	Minimum value	Nominal value	Maximum value	Units of measure
T4	Tone high period†	-100ppm	800	+100ppm	ns
T5	Tone low period†	-100ppm	800	+100ppm	ns
† Should be interpreted as an average period measurement.					

Add the following section after 147.4.4 Link Monitor function:

147.4.5 WUT Detect function

The WUT Detection function comprises a detector for WUT on a single balanced pair of conductors, BI_DA. It notifies the PHY of the detected WUT via the status parameter of the PMA_WUT.indication primitive.

The WUT Detect function shall be executed whenever the presence or absence of a WUT is detected on the MDI.

The WUT Detect function carries out the following tasks:

PMA_WUT.indication(status) set to DETECTED when WUT is detected.

PMA_WUT.indication(status) reset to NOT_DETECTED when WUT is not detected.

Add the following new clause:

147.Y Wake-Up Pulse (WUP)

The WUP is a command to indicate a wake-up request to all nodes on the mixing segment. It can be sent by any node PHY or switch PHY to distribute the wake-up request over a mixing segment. The command can be sent on either a quiet or partial mixing segment.

The WUP command is transmitted directly onto the MDI by the PHY. The WUP shall be comprised of a SUSPEND, Wake-Up Tone (WUT), COMMIT, and ESD/ESDOK sections. WUT is polarity independent. It may start with either a low or a high period.

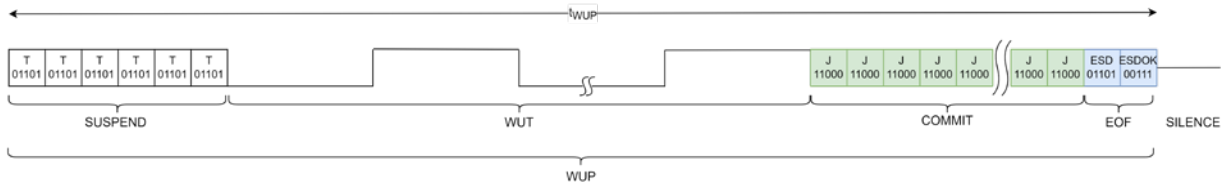

Figure 8-1--WUP Command

The SUSPEND section of the WUP pattern shall be comprised of six, DME encoded T symbols as defined in Table 147-1. The timing of constituent SUSPEND symbols should conform to the timing specifications outlined in clause 147.

The WUT section of the WUP is comprised of 12 periods of a 625kHz tone.

The COMMIT section of the WUP pattern is comprised of 24 to 26 DME encoded J symbols. The timing of constituent COMMIT symbols should conform to the timing specification outlined in clause 147.

The total length of the WUP shall conform to the timings outlined in Table 8-1—WUP timing. The transmission of the WUP must conform to the timing and electrical specifications clause 147 including updates to that clause outlined in this document.

Table 8-3—WUP timing

Symbol	Minimum	Typical	Maximum	Units
t_{WUP}	32.0	32.4	32.8	us

All other nodes on the IEEE 10BASE-T1S network segment do not commence any transmissions while a WUP command is active on the MDI.

The detection of the WUP command is left to the implementer.

PHYs with multi-speed capabilities shall use the specified WUP pattern corresponding to the speed the PHY is configured to operate in. The speed configuration process depends on the application and can be set through means of pin-strapping, auto negotiation result, register configuration, OTP fuses or similar.

If WUP is sent prior to auto negotiation results are available, then WUP should be the minimum speed advertised by the auto negotiation.

Note, it is only guaranteed that a WUP can be detected reliably if the responder PHY devices supports and operates in the WUP associated speed mode.

148 PLCA Reconciliation Sublayer (RS)

148.4 PLCA Reconciliation Sublayer Operation

148.4.4 PLCA Control

148.4.4.1 PLCA Control state diagram

Insert the following text at the end of this section

If the optional Power Management Client is supported a WUP transmission request will be forwarded to the PCS when the necessary conditions are present.

148.4.4.2 Variables

Update the variables as shown below.

[..]

wur

This variable is set to TRUE by the Wakeup.request service primitive and reset when the wur_timer elapses.

Values: TRUE or FALSE

receiving

Defined as: (RX_DV = TRUE) + (rx_cmd = COMMIT)

Values: TRUE or FALSE

tx_cmd

Command for the PLCA data state diagram to convey to the PHY via the MII.

Values : NONE, WUPRQ, BEACON or COMMIT

rx_cmd

Encoding present on RXD<3:0>, RX_ER, and RX_DV as defined in Table 22–2.

Values:

BEACON: PLCA BEACON indication encoding present on RXD<3:0>, RX_ER, and RX_DV

COMMIT: PLCA COMMIT indication encoding present on RXD<3:0>, RX_ER, and RX_DV

SUSPEND: SUSPEND indication encoding present on RXD<3:0>, RX_ER, and RX_DV

NONE: PLCA BEACON, COMMIT, or SUSPEND indication encoding not present on RXD<3:0>, RX_ER, and RX_DV

[...]

148.4.4.4 Timers

Add the following new timer.

wur_timer

Defines the duration of the WUP request for the PHY to encode.

Duration: 316 BT +/- 1 BT

148.4.4.6 State Diagram

Update Figure 148-3 and 148-4 with the following.

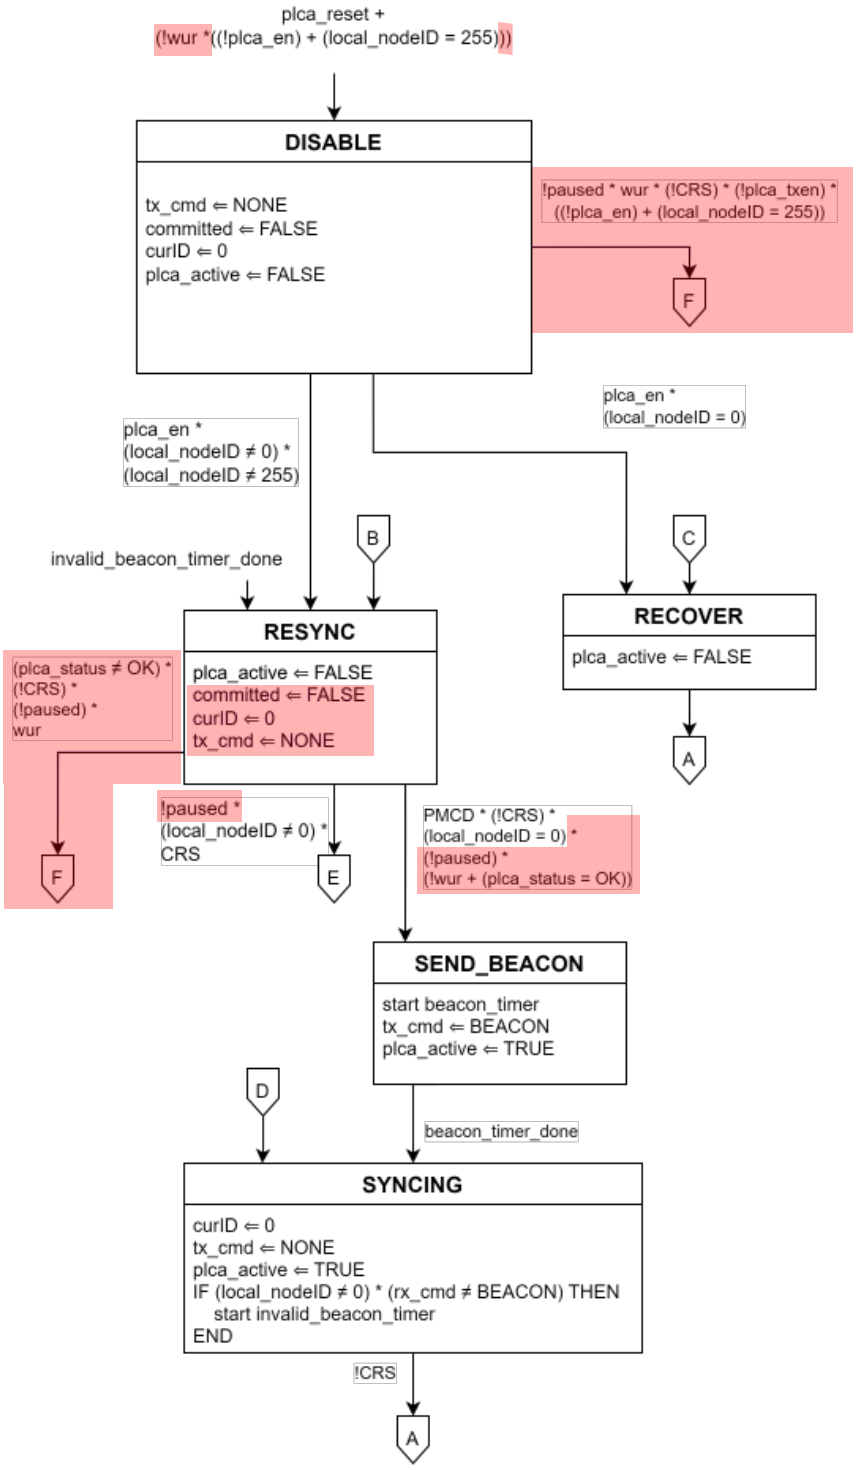

1

Figure 148-3--PLCA Control state diagram, part a

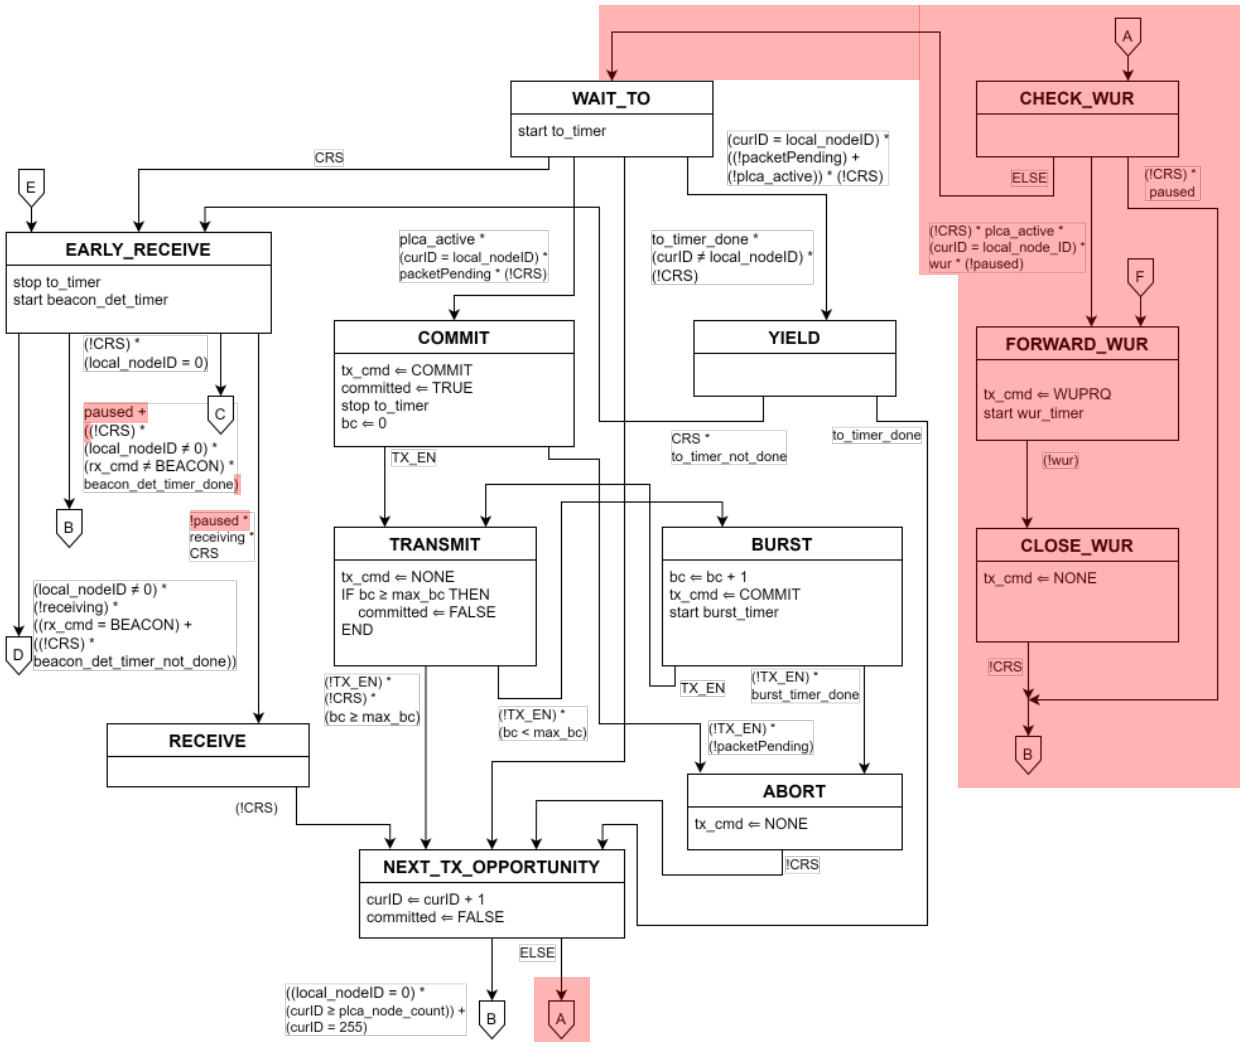

Figure 148-4--PLCA Control state diagram, part b

148.4.5 PLCA Data

148.4.5.7 State Diagram

Update Figure 148-5—PLCA Data state diagram, part a with this one.

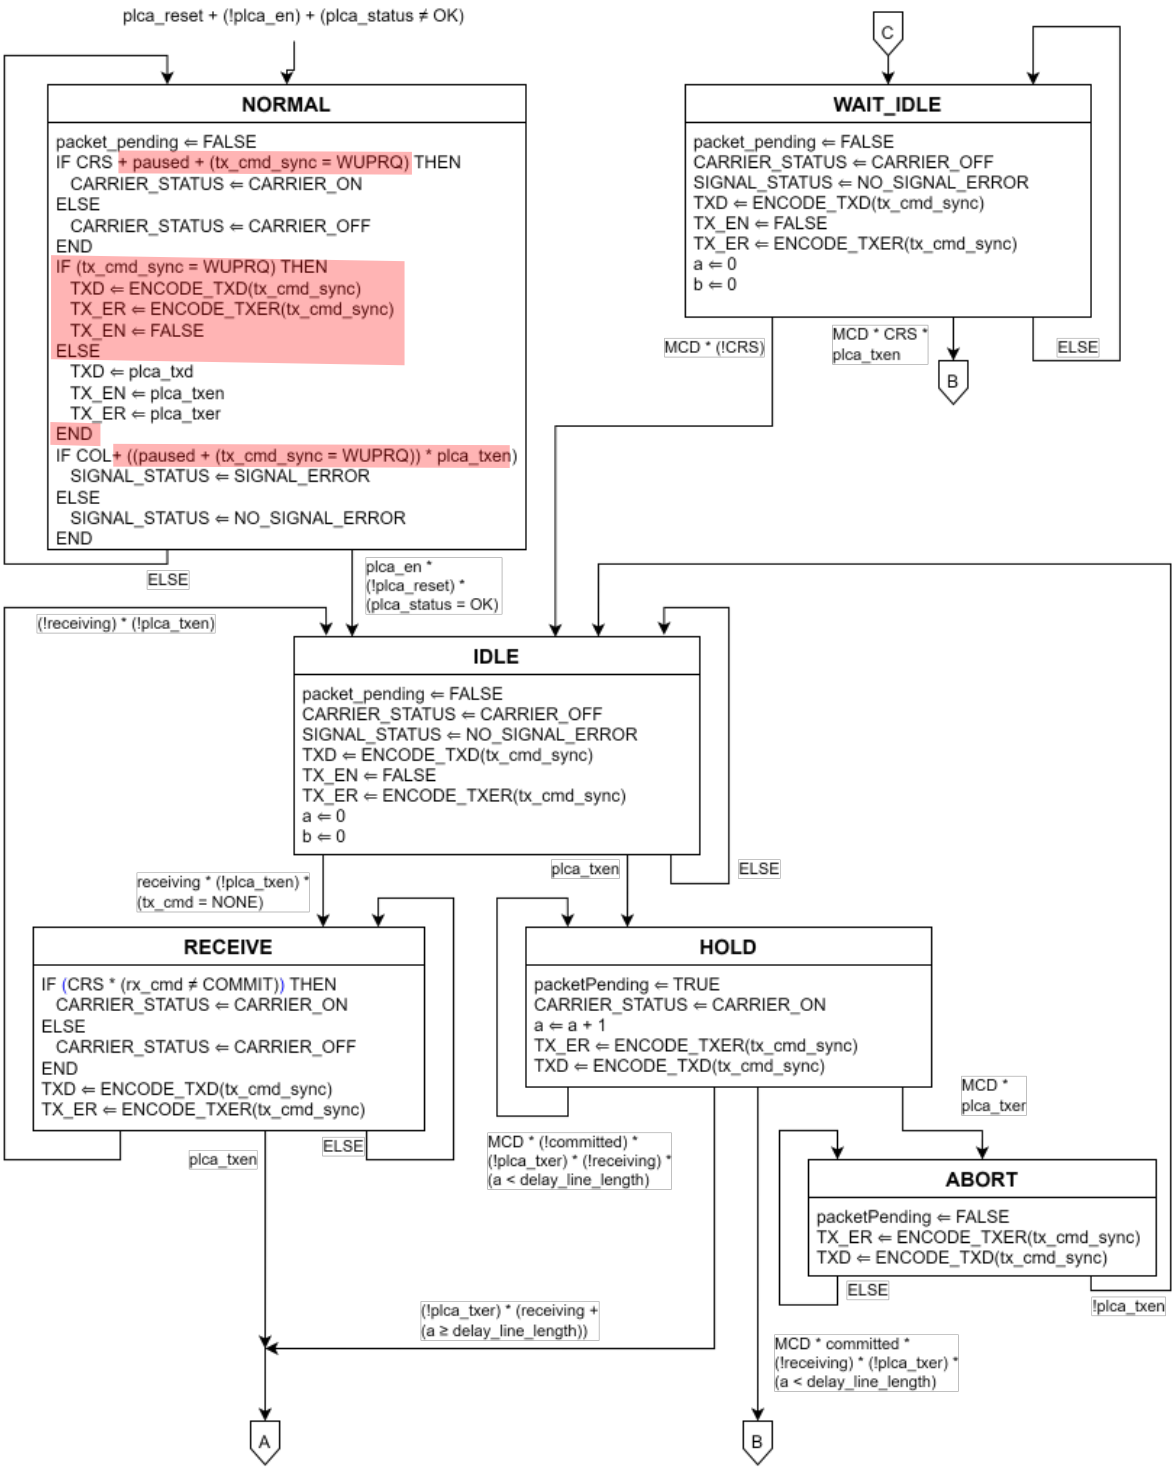

Figure 148-5—PLCA Data state diagram, part a

148.4.7 PLCA Pause

Add this section after 148.4.6 PLCA Status.

148.4.7.1 PLCA Pause state diagram

The PLCA Pause state diagram is responsible for reporting when a recent SUSPEND request has been received. The PLCA Pause function shall conform to the PLCA Pause state diagram in Figure 148- 148-8 and associated state variables and timers.

148.4.7.2 Variables

plca_paused

Controls the generation of transmit opportunities in the PLCA Control and Data state diagrams. While set to TRUE, the generation of TOs is suspended and the RS does not convey data to the PHY.

Values : TRUE or FALSE

148.4.7.3 Timers

resume_timer

Defines the time the pause variable is maintained TRUE after the PHY stops reporting a wake-up indication on the MII.

Duration : 240 BT +/- 5 BT

148.4.7.5 State diagram

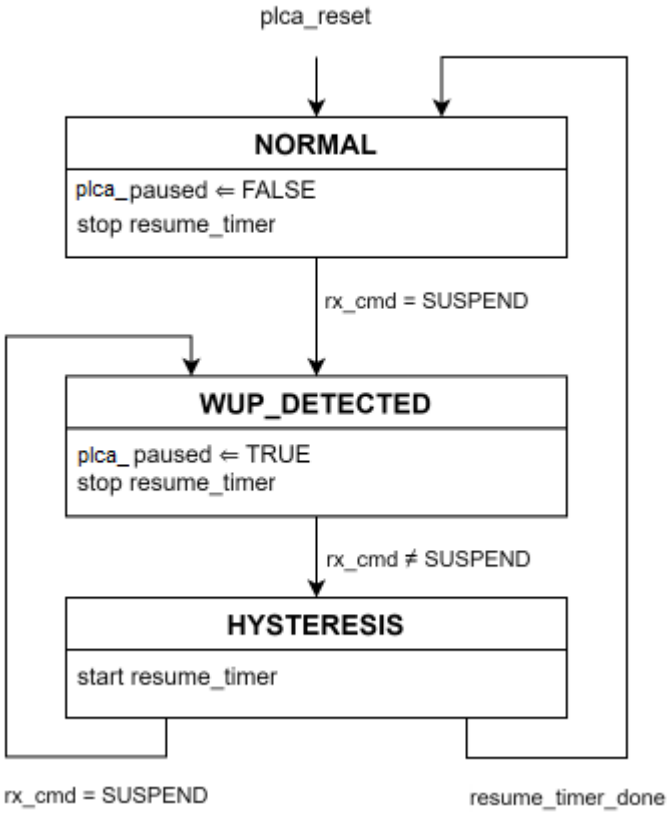

Figure 148-8--PLCA Pause state diagram

X Power Management Client

X.1 Overview

The optional Power Management Client (PM Client) enables power savings during periods where one or more nodes on the 10BASE-T1S mixing segment are not required to be operational. It controls the entry of the local PHY into a low power state and the coordinated exit from the low power state of all supporting nodes connected on the mixing segment.

The communication of the PM Client to higher layers is implementation specific. It may be through SMI, the Wake-up Electrical Interface, or other appropriate methods. The PM Client communicates with the PHY through the RS described in clause 148 and utilizes the primitives defined in section X.2.

The state machine for control of the local PHY power state is described in section X.3. The command to wake all supporting PHYs on the mixing segment from low power state is described in section 147.Y.

X.2 Service Primitives and Interfaces

Besides the service primitives and interfaces, specified in IEEE 802.3cg, new service primitives are provided by the Reconciliation Sublayer (RS) to the PM Client. These services are needed to realize the low power entry and wake-up behavior.

The low power control information is transferred between the SMI, PM Client, RS, PCS, PMA, and physical device pins.

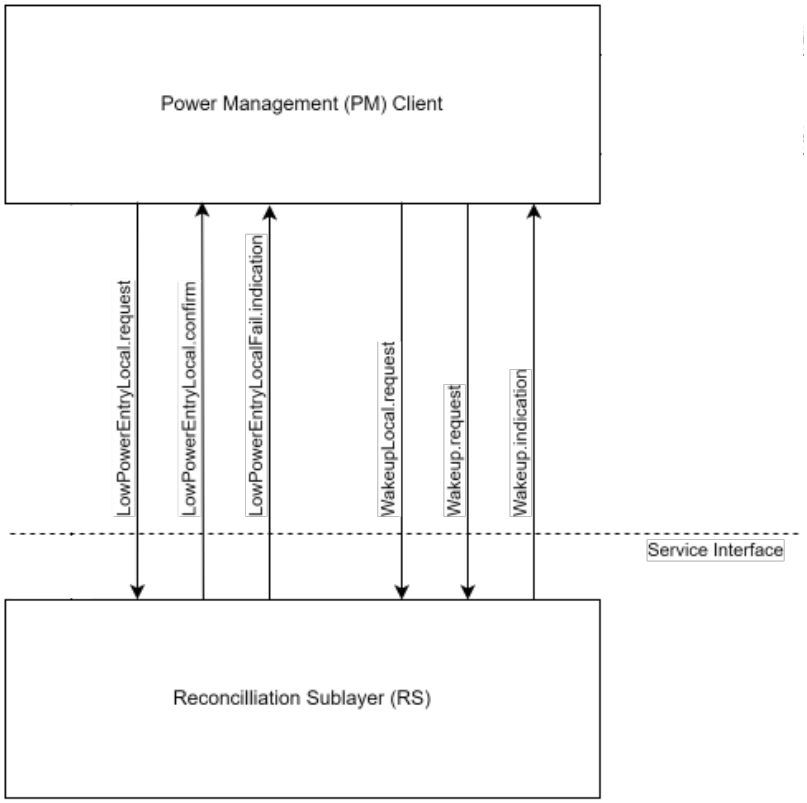

Figure 8-1--PM Client and RS interlayer service interfaces

X.2.1 LowPowerEntryLocal.request

The purpose of the *LowPowerEntryLocal.request* service primitive is to shut down the Physical Layer in a controlled manner without corrupting ongoing transmissions on the mixing segment. The activation of LowPowerEntryLocal.request for the purpose of network power management is the responsibility of the PM Client.

X.2.2 LowPowerEntryLocal.confirm

The purpose of the optional *LowPowerEntryLocal.confirm* primitive is to acknowledge the Physical Layer has successfully entered the low power state.

X.2.3 LowPowerEntryLocalFail.indicaton

The purpose of the optional LowPowerEntryLocalFail.indication is to indicate an unsuccessful attempt to put the Physical Layer into a low power state.

X.2.4 WakeupLocal.request

The purpose of the WakeupLocal.request service primitive is to transition the Physical Layer from a low power state.

X.2.5 Wakeup.request

The purpose of the Wakeup.request service primitive is to request a WUP be communicated to all nodes within the 10BASE-T1S mixing segment. If the device is in a low power state this primitive infers a WakeupLocal.request followed by a Wakeup.request.

X.2.6 Wakeup.indication

The purpose of the *Wakeup.indication* service primitive is to indicate a detected wake-up event. This includes a wake-up over a network segment as well as over a local wake-up pin.

X.2.7 Inhibit.indication

Signals the state of an optional power supply inhibit interface.

X.3 PHY power control

The following state diagram shows the power states of a 10BASE-T1S Physical Layer.

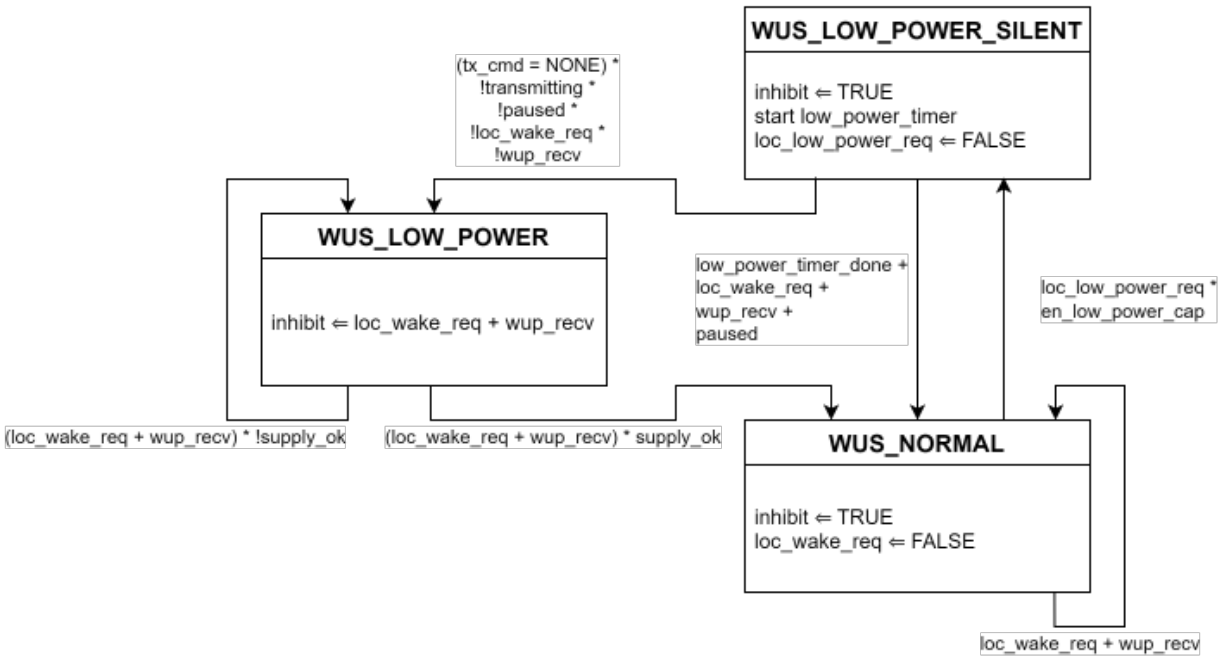

Figure 8-2--PHY power mode state diagram

X.3.1 PHY reset and initialization

After a device reset, the PHY may automatically assert loc_wake_req. This may optionally trigger a WUP transmission on the network segment.

X.3.2 Low Power

In case the PHY is not in WUS_LOW_POWER state and a *loc_low_power_req* is asserted the PHY will enter WUS_LOW_POWER_SILENT state and start the low_power_timer. In the WUS_LOW_POWER_SILENT state the PHY will wait until the PHY has completed all transmissions and no active wake-up requests are detected before transitioning into WUS_LOW_POWER state. The successful transition to WUS_LOW_POWER state may be communicated via the optional LowPowerEntryLocal.confirm primitive. In this WUS_LOW_POWER state only parts of the device required for the detection conditions that result in the transition out of this state are required to be kept active. Other parts of the device may be switched to low power consumption modes. If the conditions for transitioning into WUS_LOW_POWER state are not met before low_power_timer_done or a wake-up request is received, the PHY transits back to WUS_NORMAL state and may be communicated via the optional LowPowerEntryLocalFail.indication.

X.3.3 Wake-up

In case the PHY is in WUS_LOW_POWER state and a Wakeup.request is detected the PHY will inhibit the power supply from shutting down. Once the power supply is within operating range the PHY will enter WUS_NORMAL power state.

The signaling of a *Wakeup.request* is achieved by transmitting a WUP on the mixing segment at the appropriate time.

Wakeup.indication shall be asserted upon wake-up events. This service primitive is generated in any of the following cases:

A valid WUP (wup_recv) is detected over MDI by the PMA.

A valid local wake-up (loc_wake_req) is asserted.

The WUP detection process is implementation specific. A detected WUT communicated via PMA_WUT.indication may be used as part of this process.

X.3.4 Variables

wup_recv

This variable is set according to the status parameter of the PMA_WUT.indication primitive. When status is DETECTED this variable is set to TRUE. This variable is set to FALSE when the PHY Power Mode state machine enters WUS_NORMAL state.

Values: TRUE or FALSE

loc_low_power_req

This variable is set to TRUE if a low power state is requested by the LowPowerEntryLocal.request service primitive. The variable is set to FALSE when the PHY Power Mode state machine enters WUS_LOW_POWER_SILENT state.

Values: TRUE or FALSE

loc_wake_req

This variable is set to TRUE if a local wake-up is requested by the WakeupLocal.request service primitive. The variable is set to FALSE when the power state controller returns to WUS_NORMAL state.

Values: TRUE or FALSE

inhibit

Set to TRUE if the (external) power supply shutdown is inhibited.

Values: TRUE or FALSE

en_low_power_cap

Set to TRUE if the PM Client is supported by the local PHY, otherwise it is set to FALSE.

Values: TRUE or FALSE

plca_paused

See section 148.4.7.2

supply_ok

Set to OK if PHY power supplies are within the operating range of the device.

Values: OK or ERROR

tx_cmd

See section 148.4.4.2

transmitting

See section 147.3.2.2

X.3.5 Timers

LOW_POWER_timer

The maximum allowed time for a PHY node or SWITCH to transition to LOW_POWER state from when a LowPowerEntryLocal.Request is received. Expiration shall be indicated via LowPowerEntryLocalFail.indication.

Duration: 2ms +/- 10%