

Add the following variable to section 145.2.5.4

pse_power_update_ready

A variable that indicates to the DLL state-machine that the PSE is ready to accept DLL power updates.

Values:

FALSE: The PSE is not ready to evaluate a new DLL power update.
TRUE: The PSE is ready to evaluate a new DLL power update.

Update Figure 145-13 and Figure 145-43 as follows (additions in blue and deletions in red):

145.2.5.7 State diagrams

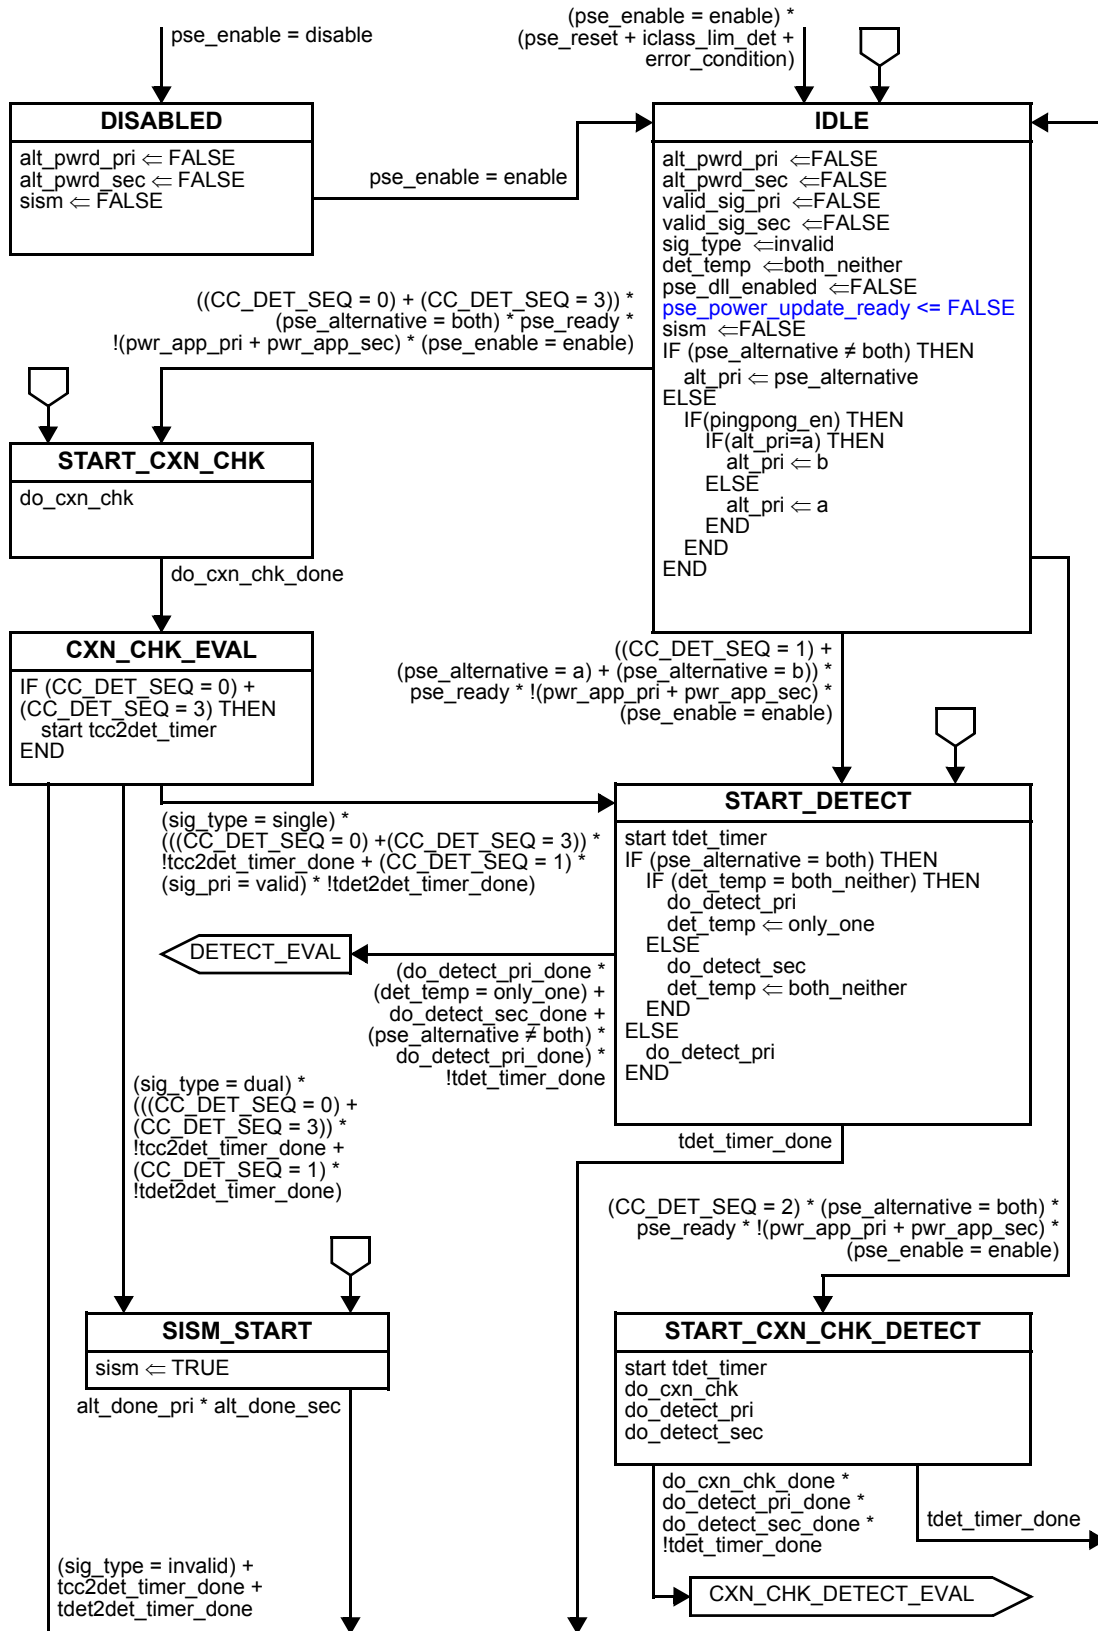


Figure 145–13—Top level PSE state diagram

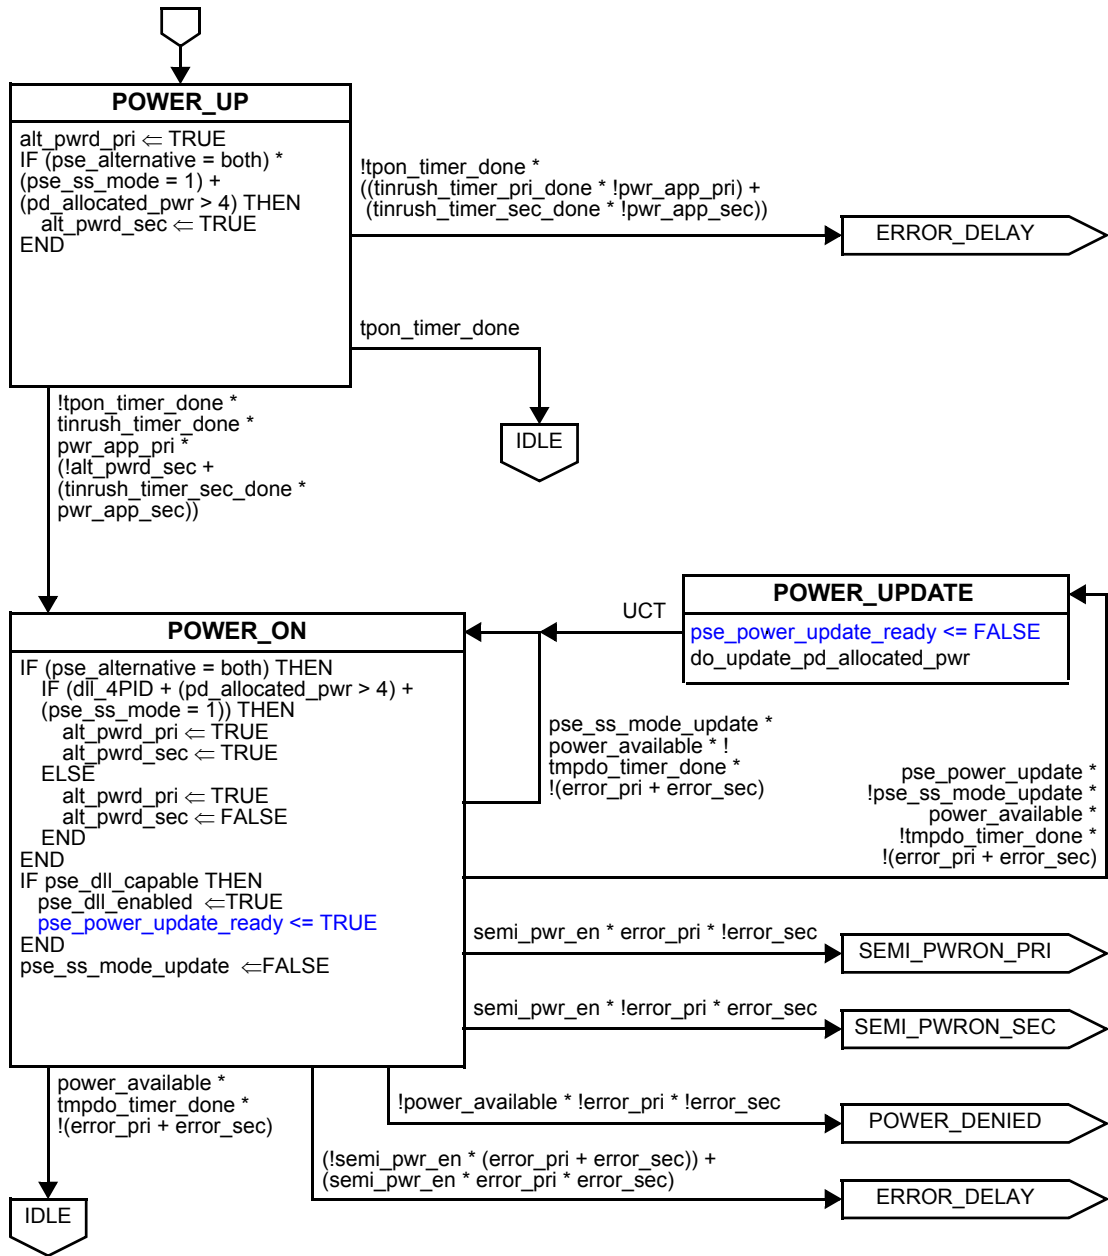


Figure 145-13—Top level PSE state diagram (continued)

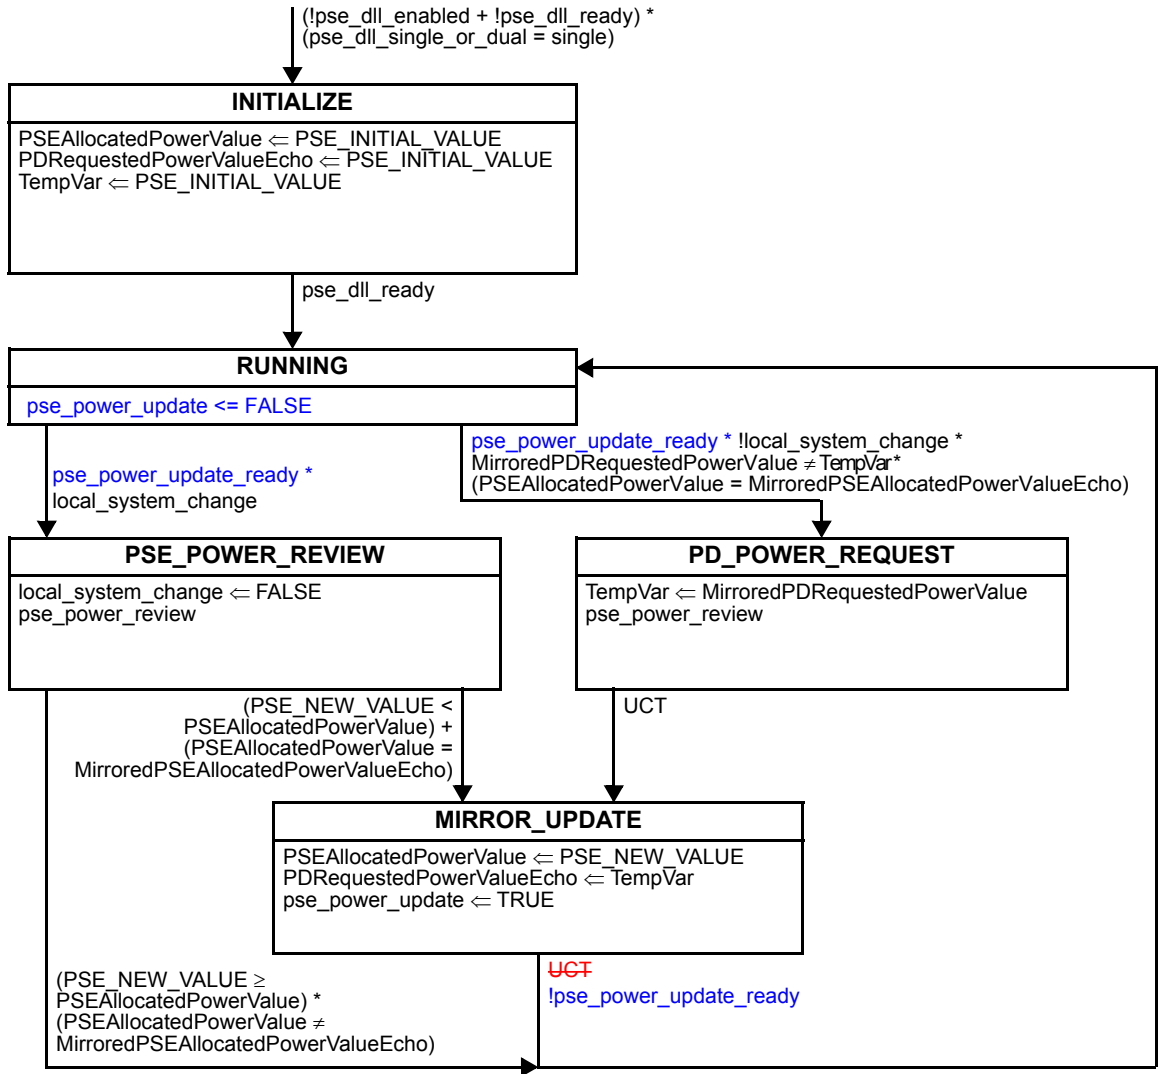


Figure 145-43—PSE power control state diagram