

Project	<b>IEEE 802.16 Broadband Wireless Access Working Group</b> < <a href="http://ieee802.org/16">http://ieee802.org/16</a> >		
Title	<b>Coordinated approach for inter-cell interference management</b>		
Date Submitted	<b>2008-07 -016</b>		
Source(s)	Mariana Goldhamer Alvarion ltd. 21A, Ha Barzel Street Tel Aviv	E-mail:	<a href="mailto:mariana.goldhamer@alvarion.com">mariana.goldhamer@alvarion.com</a>
Re:	16m Call for Contributions on Interference Mitigation		
Abstract	Proposed 802.16m resource allocation and power rules for interference mitigation		
Purpose	Actions: 1. Modification of ToC 2. Capture of the text in the SDD		
Notice	<i>This document does not represent the agreed views of the IEEE 802.16 Working Group or any of its subgroups. It represents only the views of the participants listed in the "Source(s)" field above. It is offered as a basis for discussion. It is not binding on the contributor(s), who reserve(s) the right to add, amend or withdraw material contained herein.</i>		
Release	The contributor grants a free, irrevocable license to the IEEE to incorporate material contained in this contribution, and any modifications thereof, in the creation of an IEEE Standards publication; to copyright in the IEEE's name any IEEE Standards publication even though it may include portions of this contribution; and at the IEEE's sole discretion to permit others to reproduce in whole or in part the resulting IEEE Standards publication. The contributor also acknowledges and accepts that this contribution may be made public by IEEE 802.16.		
Patent Policy	The contributor is familiar with the IEEE-SA Patent Policy and Procedures: < <a href="http://standards.ieee.org/guides/bylaws/sect6-7.html#6">http://standards.ieee.org/guides/bylaws/sect6-7.html#6</a> > and < <a href="http://standards.ieee.org/guides/opman/sect6.html#6.3">http://standards.ieee.org/guides/opman/sect6.html#6.3</a> >. Further information is located at < <a href="http://standards.ieee.org/board/pat/pat-material.html">http://standards.ieee.org/board/pat/pat-material.html</a> > and < <a href="http://standards.ieee.org/board/pat">http://standards.ieee.org/board/pat</a> >.		

# Coordinated approach for inter-cell interference management

*Mariana Goldhamer*

Alvarion Ltd.

## Introduction

It is well known that the interference mitigation is optimal when using dedicated frequency and time resources at cell edge, for each of the strong interfering sectors. In the same time, the maximum frequency efficiency is obtained when at least part of resources are used in a shared mode.

Traditionally the dedicated frequency and/or time resources are associated with Reuse 3, while the shared frequency and/or time resources are associated with Reuse 1. A suggestive illustration is done in Fig. 1: (provided in [1]).

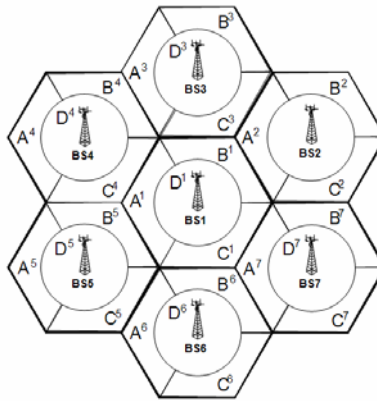


Fig. 1 Example of cell deployment

In this figure the Reuse1 areas are marked with D, while the Reuse 3 areas are marked with A, B, C.

The E-MBS coverage shall cover the entire deployment as a single frequency network and it is added in Fig. 2, as circles over the cell area.

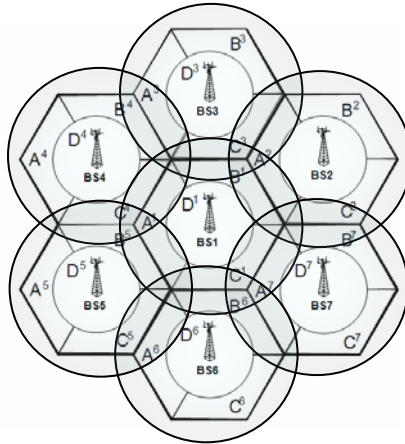


Fig. 2 Example of cell deployment including E-MBS services

### ***Flexibility of allocation***

The existing 802.16 standard allows the usage of the dedicated and shared resources in different time zones, however this approach does not allow the flexibility of resource allocation, due to the scarcity of the available sub-frames in a 5ms frame. For example, if the 5...8 sub-frames in a frame are used for:

- Support of Legacy 802.16
- Relay operation in Legacy mode
- Support of 802.16m
- Relay operation in 802.16m,

both down-link and up-link, it is obvious that no flexibility is allowed for using the dedicated and shared resources.

### ***Interference mitigation using power control***

This subject is addressed in a separate contribution.

### ***Interference separation using Advanced Antenna Techniques***

Advanced Antenna Techniques (AAT) technology can separate the signal from the interference created by an adjacent cell, such that function of implementation of this technology by different system elements (MS, BS, Relay) should be possible:

1. Increasing the percentage of the shared allocation;
2. Using at least a fraction of the dedicated allocations by multiple sectors.

### **Resource allocation for interference mitigation**

We propose to allocate the dedicated and shared allocations within OFDMA domain, including rules for full channel usage.

The advantages are:

- Frequency channel can be fully reused
- The interference at the cell margin is reduced
- Splitting in time domain between Reuse 3 and Reuse 1 is not longer necessary; this legacy split mode contradicts with the sub-frame concept and the Relay concept, which both add time-domain splitting.

Splitting everything in time domain introduces spectral efficiency problems due to the granularity of time resource allocations for Zones and overheads related to excessive fragmentation.

The allocation is named “SET”, which is an enhancement of the “segment” concept in the basic 802.16 standard. Was preferred the introduction of a new term in order to avoid confusions between the segments in the legacy standard and the segments in the 802.16m Amendment.

*From here insert text for SDD*

#### 11.4.8 Coordinated resource allocation for inter-cell interference management

The coordinated resource allocation for interference mitigation defines frequency resources to be allocated per for addressing general deployment cases.

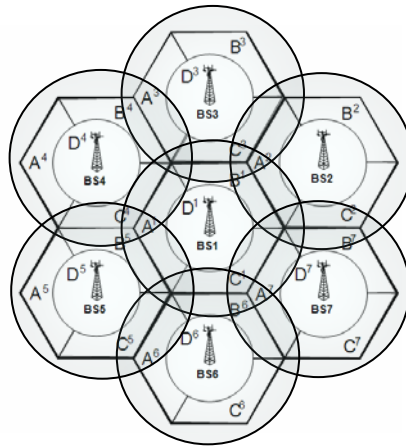


Fig. aa Example of cell deployment including E-MBS services

In fig. aa there are three different deployment cases having different interference conditions:

1. Areas of Reuse 1, for data services, traditionally located around the cell center, noted with “D”
2. Areas of Reuse 3, located at the cell edge, noted with A,B or C depending of the specific Sector
3. Areas of Reuse 1, for E-MBS (Extended Multicast-Broadcast) Services, which over circle the entire cell.

The areas of Reuse 1 providing data services can be extended towards the cell margin if the interference is mitigated using AAT.

OFDMA resources are allocated for each of the three areas. The resources are allocated in a coordinated mode between the interfering cells, coordination which may be achieved using inter-BS communication over the air, or eventually over the backbone.

A special case is represented by the allocation of resources for advanced antenna techniques for interference cancellation.

##### 11.4.8.1 Resource allocation

The frequency channel is split in SETs, every SET comprising a number of sub-channels. Every sub-channel may use localized or distributed carrier partitions. There are two different types of SETs:

- **Shared SETs**, used by all the sectors and intended for Reuse 1 and E-MBS
- **Dedicated SETs**, used by a specific BS sector, in its operation with mitigated interference, named **Master operation**. The Dedicated SETs are intended for Reuse 3 operation. The Dedicated SET of a sector can be also used by another BS Sector, if the Master operation is not affected. Such operation of

the other sector is named “**Slave operation**” and the SET used in Slave operation is named “**Slave SET**”. The interference mitigation can be achieved by power rules or AAT-based interference rejection.

A list of the possible SETs is given below:

- **Shared E-MBS SET**, for Multi-cast and Broadcast services, forming a “single downlink frequency” channel. Base Stations may use this sub-channel partition for providing the E-MBS services. The E-MBS SET is used only in downlink.
- **Shared Control/Data SET I**, used for sending/receiving Control/Data information to/from those users which do not suffer from significant interference.
- **Shared Control/Data SET II**, used for sending/receiving Control/Data information to/from those users which do suffer from significant interference using advanced antenna techniques like DL beamforming with nulling, inter-cell collaborative MIMO and others.
- **Dedicated Control/Data SET**, typically used for sending Control/Data information at maximum power density and to receive at minimum interference. Each sector in a BS will have its dedicated SET.
- **Slave Control/Data SET**, which can be used for sending/receiving Data and eventually Control information. The transmission can take place only if it is not creating interference to the Master SETs in other Base Stations.

Fig. xx shows the down-link channel splitting in SETs, as seen by the BS Sector 1. The control elements (CCH) of each SET have fixed locations and are transmitted at the beginning of the superframe.

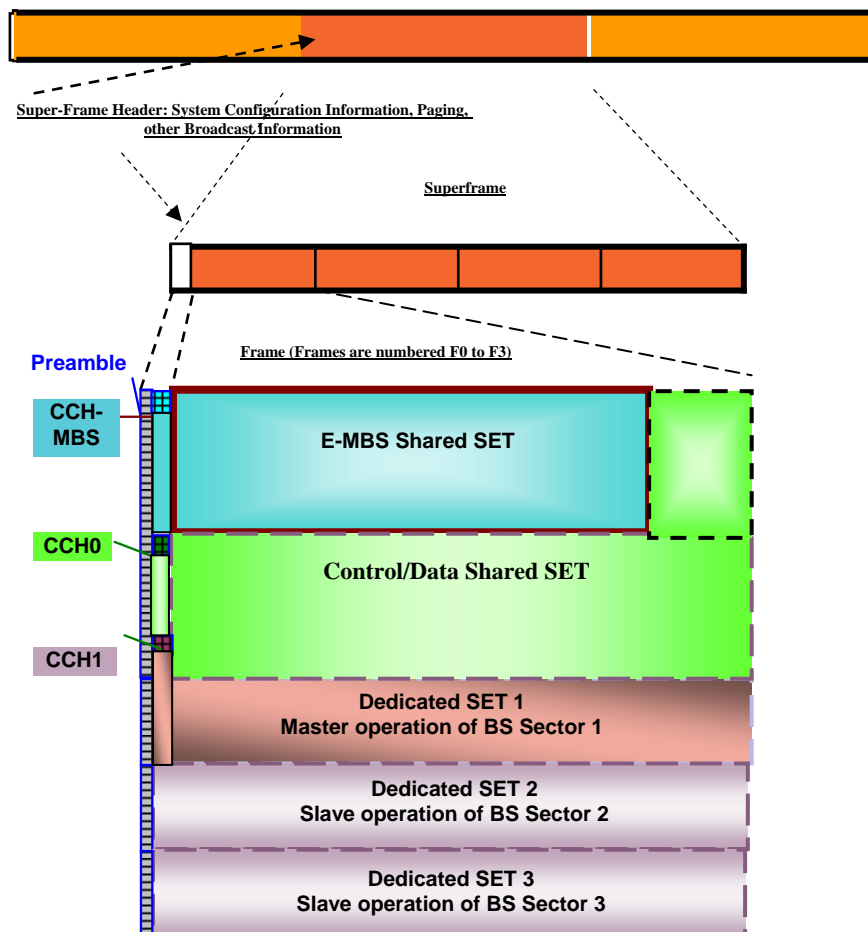


Fig. xx DL channel splitting in SETs, as seen by BS Sector 1

The superframe preamble and the Frame preambles are sent following the SET power rules.

The number of sub-channels allocated per SET may be dynamically changed every superframe. In this way, the SET capacity can be adapted to both interference and traffic conditions.

11.4.8.2 AAT for interference mitigation

A higher spectral efficiency may be obtained when the interference is separated in space domain, using advanced antenna techniques like DL transmit beamforming with nulling, collaborative inter-cell MIMO and others. In such cases, the interfering radio devices may use the same OFDMA allocation; however this advanced antenna techniques for interference mitigation requires different OFDMA resources within a SET.

Figure yy exemplifies such a situation for down-link Shared Control/Data SET, where two different AAT techniques partitions are created within this SET. The AAT 1 partition is used for the regular AAT operation, while the AAT 2 partition is used for both data transmission and interference cancellation. Each partition use control elements transmitted using the suitable AAT technique.

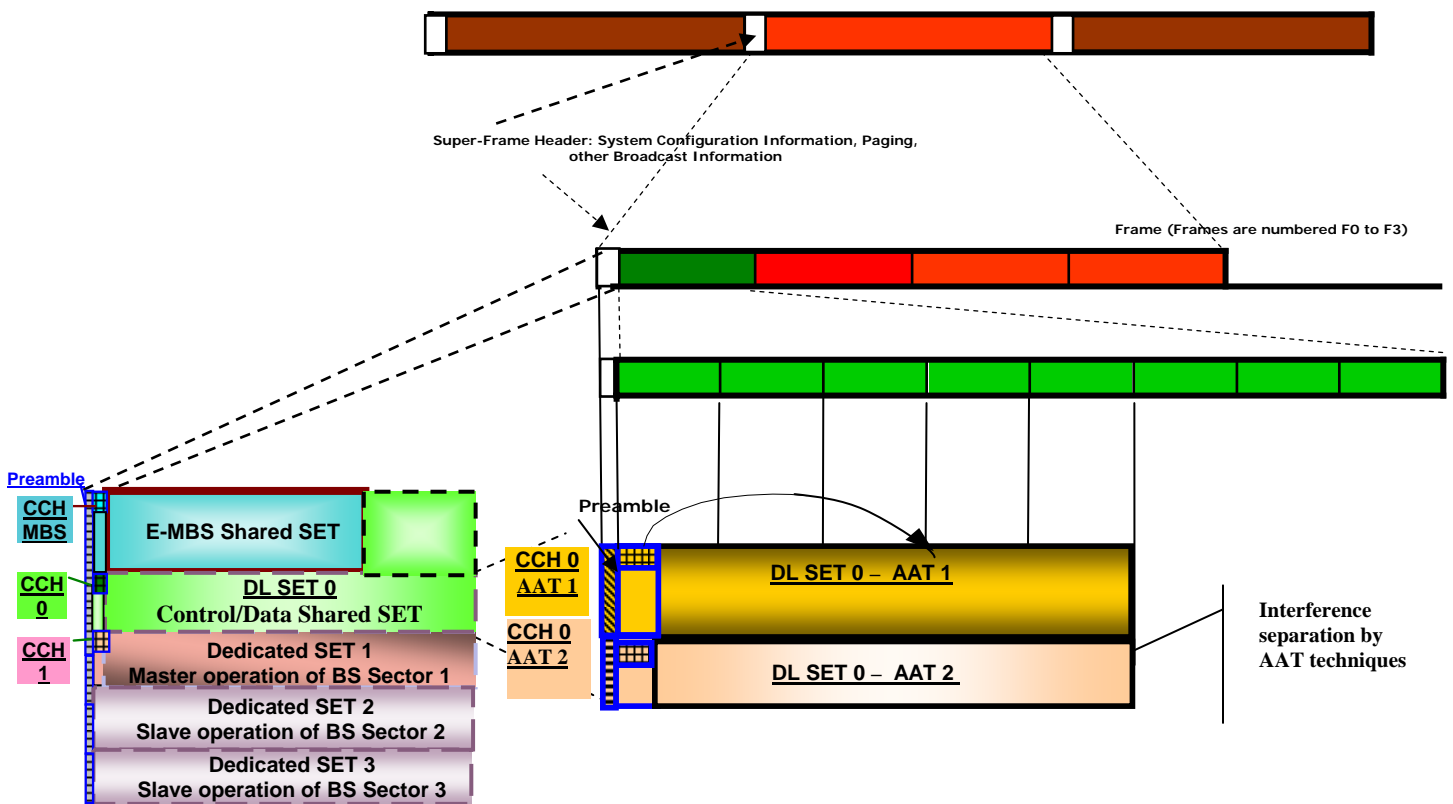


Fig. yy Example of SET splitting in Zones, within DL SET 0

*End text insertion*

## References

[1] Zhifeng (Jeff) Tao, Amine Maaref, Koon Hoo Teo, Philip V. Orlik, Ramesh Annavajjala, Andreas F. Molisch, Jinyun Zhang, Toshiyuki Kuze , IEEE C802.16m-08/527, Resource Allocation for inter-cell interference coordination.