

Project	IEEE 802.16 Broadband Wireless Access Working Group < http://ieee802.org/16 >		
Title	Contribution on 802.16j (Mobile Multihop Relay) Military Usage Models		
Date Submitted	2006-06-20		
Source(s)	Matthew Sherman, Kevin McNeill BAE SYSTEMS, NES Mail Stop 11B01 164 Totowa Road Wayne, NJ 07474-0975 Voice: +1 973.633.6344 Fax: +1 973.633.6004 E-mail: matthew.sherman@baesystems.com	D. J. Shyy MITRE McLean, VA 22102 Voice: +1-703-983-6515 Fax: +1-703-983-7142 E-mail: djshyy@mitre.org	Seth Spoenlein US Army - CERDEC Systems Engineering Space & Terrestrial Communications Directorate Ft. Monmouth, N J Voice: (732) 427-0035 E-mail: Seth.Spoenlein@us.army.mil
Re:	Submitted in response to motion passed in 802.16j TG meeting in Tel Aviv to from Ad Hoc Group tasked with producing a harmonized contribution on 802.16j Usage Models.		
Abstract	This contribution describes Military requirements for the 802.16j usage models. The changes described are relative to the document titled C80216j%2d06_UMAHtemp_r4[1].doc. Desired changes are indicated as <u>underlined</u> or crossed-out text.		
Purpose	To provide inputs to the 802.16j Task group on Mobile Multi-hop Relay (MMR) Usage Models.		
Notice	This document has been prepared to assist IEEE 802.16. It is offered as a basis for discussion and is not binding on the contributing individual(s) or organization(s). The material in this document is subject to change in form and content after further study. The contributor(s) reserve(s) the right to add, amend or withdraw material contained herein.		
Release	The contributor grants a free, irrevocable license to the IEEE to incorporate material contained in this contribution, and any modifications thereof, in the creation of an IEEE Standards publication; to copyright in the IEEE's name any IEEE Standards publication even though it may include portions of this contribution; and at the IEEE's sole discretion to permit others to reproduce in whole or in part the resulting IEEE Standards publication. The contributor also acknowledges and accepts that this contribution may be made public by IEEE 802.16.		
Patent Policy and Procedures	The contributor is familiar with the IEEE 802.16 Patent Policy and Procedures < http://ieee802.org/16/ipr/patents/policy.html >, including the statement "IEEE standards may include the known use of patent(s), including patent applications, provided the IEEE receives assurance from the patent holder or applicant with respect to patents essential for compliance with both mandatory and optional portions of the standard." Early disclosure to the Working Group of patent information that might be relevant to the standard is essential to reduce the possibility for delays in the development process and increase the likelihood that the draft publication will be approved for publication. Please notify the Chair < mailto:chair@wirelessman.org > as early as possible, in written or electronic form, if patented technology (or technology under patent application) might be incorporated into a draft standard being developed within the IEEE 802.16 Working Group. The Chair will disclose this notification via the IEEE 802.16 web site < http://ieee802.org/16/ipr/patents/notices >.		

802.16j (Mobile Multihop Relay) Usage Models

1 Table of Contents

1	TABLE OF CONTENTS	1
2	INTRODUCTION	2
3	USAGE MODELS	2
3.1	Fixed Infrastructure Usage Model	2
3.2	In-Building Coverage Usage Model	3
3.3	Temporary Coverage Usage Model	4
3.4	Coverage On Mobile Vehicle Usage Model	5
4	PERFORMANCE OBJECTIVES	6
4.1	Per-User Throughput and/or Capacity Enhancement	7
4.2	Coverage and/or Range Extension	7
5	TOPOLOGY	7
5.1	Supported Link Types	8
5.2	Number of Hops	8
5.3	Types of Routes	8
6	RS CHARACTERISTICS	9
6.1	Mobility	9
6.2	Ownership	9
6.3	Antenna usage	9
7	SUMMARY	10

2 Introduction

This document captures the usage models for the 802.16j project. This document is intended to be used as a guideline for drafting the amendments to the standard. The purpose of usage models is to define different deployment scenarios (e.g., fixed, nomadic, mobile) to characterize requirements on for the network elements (e.g., RSs) and functional entities to improve system performance (e.g., extending coverage, increasing throughput).

3 Usage Models

In this section we describe the major usage models that are envisaged for 802.16j systems. The usage models are ~~categorized~~classified from the perspective of the infrastructure, specifically according to where coverage is being provided. The usage models differ in terms of the manner in which RSs are deployed and the types of services or performance goals are trying to be achieved. From the perspective of an MS, the coverage provided within the different usage models is the same. As an MS moves within a network, it may encounter different usage models and may move from one usage model to another. For example, an MS can move from coverage provided inside a building by an RS deployed to provide coverage in that building, to the outdoors where it is covered by a fixed RS deployed at a nearby cell site, to a train, where coverage is provided by an RS mounted on the train to provide coverage to users riding on that train.

3.1 Fixed Infrastructure Usage Model

In this usage model a service provider deploys RSs and MMR-BSs within their network to improve to improve coverage, capacity or per user throughput in areas which are not sufficiently covered in the MMR-BS cell or to extend coverage to areas that are beyond the boundaries of the MMR-BS coverage area. Fixed relay stations that are owned by the infrastructure provider are utilized in this model. RSs can range from simple to complex. They can be mounted on towers, poles, tops or sides of buildings, lamp posts, or in other locations. The provider can plan the locations of RS antennas to obtain LOS channels between the MMR-BS and RSs, but this will not always be practical, so NLOS channel conditions on links between MMR-BS and RSs can be expected. Another potential deployment strategy is to collocate small, simple RSs with stationary client devices mounted on rooftops or within buildings. Stationary client system examples include not just private and business stationary systems, but also hot-spots on utilities, municipals, and others. In general, RSs will enter the network when they are deployed and remain in the network under the management of the infrastructure provider. In the case of RSs collocated with stationary client devices, RSs may enter and leave the network unexpectedly based on the actions of the clients that own them. Topologies can range from 2 hops to multiple hops. Redundant routes are possible and can be utilized to provide fault tolerance and to balance the traffic load.

Figure 1 illustrates some of the use cases that appear in this usage model. These include deployment of RSs to provide coverage extension at the edge of the cell, to provide coverage for indoor locations, to provide coverage for users in coverage holes that exist due to shadowing and in valleys between buildings, and to provide access for clusters of users outside the coverage area of the BS.

For military use case scenarios, the RS site may be pre-planned and carefully designed to provide enhanced connectivity and capacity to MS/SS users. Antenna heights may be significantly less than commercial

deployments, such as cell towers or high rises due to operational safety concerns, area of operation, and amount of infrastructure available. Redundant routes are often used to provide fault tolerance and to balance the traffic load.

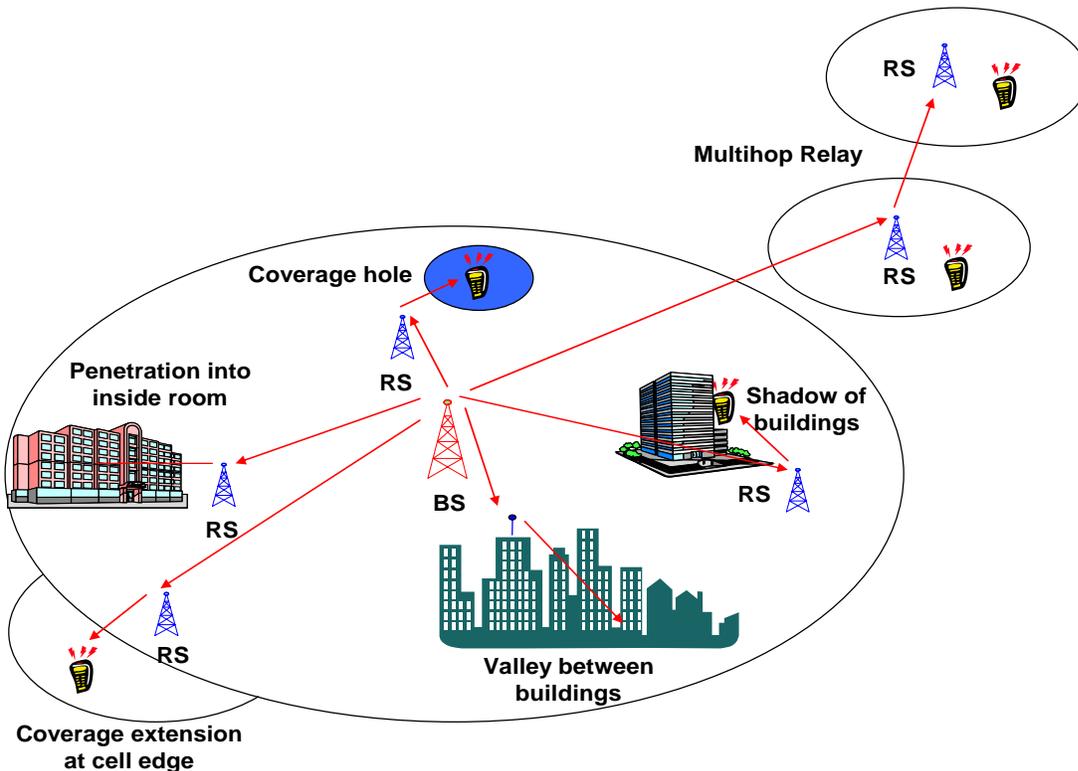


Figure 1 Example Use Cases from the Fixed Infrastructure Usage Model

3.2 In-Building Coverage Usage Model

In this usage model RSs are deployed to provide better coverage and higher throughput in a building. There can be one RS that services a small building, or multiple RSs that service a larger building. The RSs can be owned by the infrastructure provider or by the customer and will generally need to be simple and low cost. They can be fixed or nomadic. Channel conditions between the MMR-BS and RSs will generally be NLOS. In this usage model RSs owned by the infrastructure provider will enter the network when they are deployed and remain in the network under the management of the infrastructure provider, while client owned RSs may enter and exit the network unexpectedly based on the actions of the clients that own them. Topologies can range from 2 hops to multiple hops. Redundant routes are possible and can be utilized to provide fault tolerance and to balance the traffic load. The RS may be deployed inside the building, or outside.

Figure 2 illustrates some examples of in-building coverage. In the upper half of the figure is an example of a nomadic RS that is placed in a location in which it receives a sufficient signal to the MMR-BS or to another RS. The nomadic RS then provides access to subscribers within the room or building. In the lower half of the figure

is pictured the case where a number of RSs are deployed within a larger building such as a multi-tenant dwelling or office building. Data is relayed among the RSs in the building and out to an RS or MMR-BS outside the building.

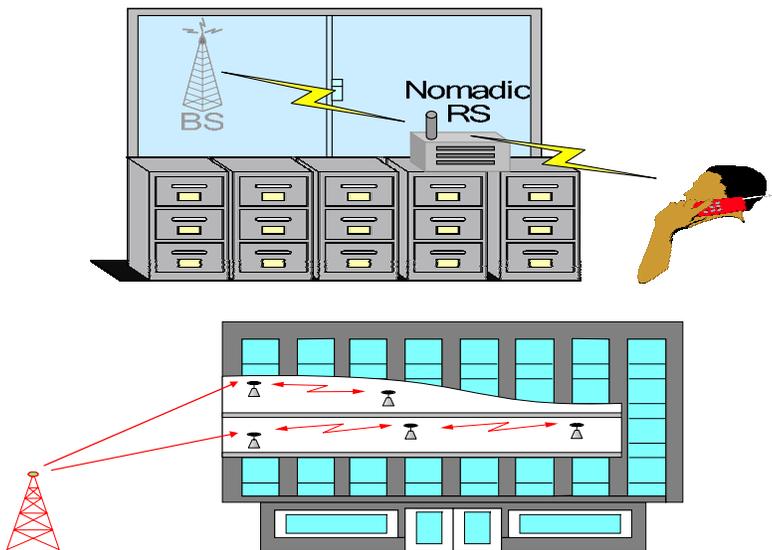


Figure 2 Examples of In-building Coverage Usage Model

3.3 Temporary Coverage Usage Model

In this usage model nomadic RSs are deployed temporarily to provide additional coverage or capacity in an area where the MMR-BS and fixed RSs do not provide sufficient coverage or capacity. RSs deployed in this usage model can range from small and simple to large and complex. In this usage model RSs will enter the network when they are deployed and will exit the network when the temporary situation for which they were deployed has ended. Topologies can range from 2 hops to multiple hops. LOS or NLOS channel conditions can be expected between MMR-BS and RSs. Some examples of the situations in which temporary coverage is required are:

- Emergency / Disaster Recover – In this case fixed infrastructure may have been destroyed or coverage is required in areas that are not serviced by fixed infrastructure deployments.
- Temporary Coverage for Event – In this case an event such as a sporting event or fair requires that coverage be provided for the duration of the event.

The detailed usage scenarios in this model are similar to those of the fixed infrastructure usage model and are illustrated in Figure 1.

Within military scenarios, RS sites can be pre-planned to some extent, but may have to be placed in an arbitrary manner due to unanticipated environmental anomalies or deployment dynamics. Typically, antenna heights are relatively low, such as vehicle-mounted masts; one purpose being quick deployment and fast tear-down. RS in this configuration may have some limitations in size, weight, and power to minimize the amount of support equipment and infrastructure necessary to allow proper functionality of RS.

3.4 Coverage On Mobile Vehicle Usage Model

In this usage model coverage is provided for MS/SS devices which are traveling together on a mobile vehicle, such as a bus or a train. A mobile RS is mounted on the vehicle and it connects to an MMR-BS or RS via a mobile link. It provides a fixed access link to MS/SS devices riding on the platform. RSs deployed in this usage model are expected to be complex. In this usage model RSs may enter and exit the network when the vehicle enters or exits the coverage area of the network. They may also enter the network when the vehicle is put into service (for example for the first train in the morning) and exit the network when the vehicle is taken out of service (for example after the last train in the evening). In this model, topologies may involve 2 or more hops. An example of a multihop topology is the case where the train travels through a tunnel and the mobile RS onboard the train connects to RSs that are deployed along the tunnel. Examples of mobile vehicles are:

- Trains
- Buses
- Ferries (local commuter boats/ships)

In this usage model it is expected that a mobile RS can provide service directly to a number of MSs that are riding on the vehicle, or via one or more additional RSs that are also located on the vehicle (as in the case of a long train). In this case the other RSs are mobile in the sense that they are moving on the vehicle, but they are fixed relative to each other.

Figure 3 illustrates some examples of coverage on a mobile vehicle. In the top half of the figure is illustrated the case where a mobile RS is mounted in a bus and provides coverage for MSs riding on the bus. The RS on the bus may connect to the MMR-BS or may connect to an RS, as is shown on the right, where the bus is traveling along an urban street in the valley created by tall buildings. In the lower half of the figure is illustrated the case where the RS is mounted on a train. In this case as well, the RS may connect to the MMR-BS directly or may connect via one or more RSs as in the case where the train is traveling through a tunnel in which coverage is provided by a series of RSs.

For military scenarios, RS topology will be dynamic to support mobile force utilizing MSs. Antenna heights would be significantly lower compared to Fixed and Nomadic deployments due to vehicular restrictions, visual signature, and operational safety concerns. Mobile deployment of RS's in this configuration may have severe size, weight, and power limitations. Under the On-The-Move (OTM) operation, RSs are used to extend the range of a BS and move along with the MSs. However, MSs and RS do not need to be on the same platform. Also, RS may need to coordinate with other RSs to provide better service to the MSs. Under OTM operation, if connectivity between RS and MMR-BS is interrupted, SS/MS stations connected to RS should not suffer from loss in service amongst SS/MS nodes. In this case, SS/MSs communicate with each other through the RS. Mobile nodes comprise of similar platforms (i.e. vehicles) used within commercial applications with the addition of low flying air vehicles.

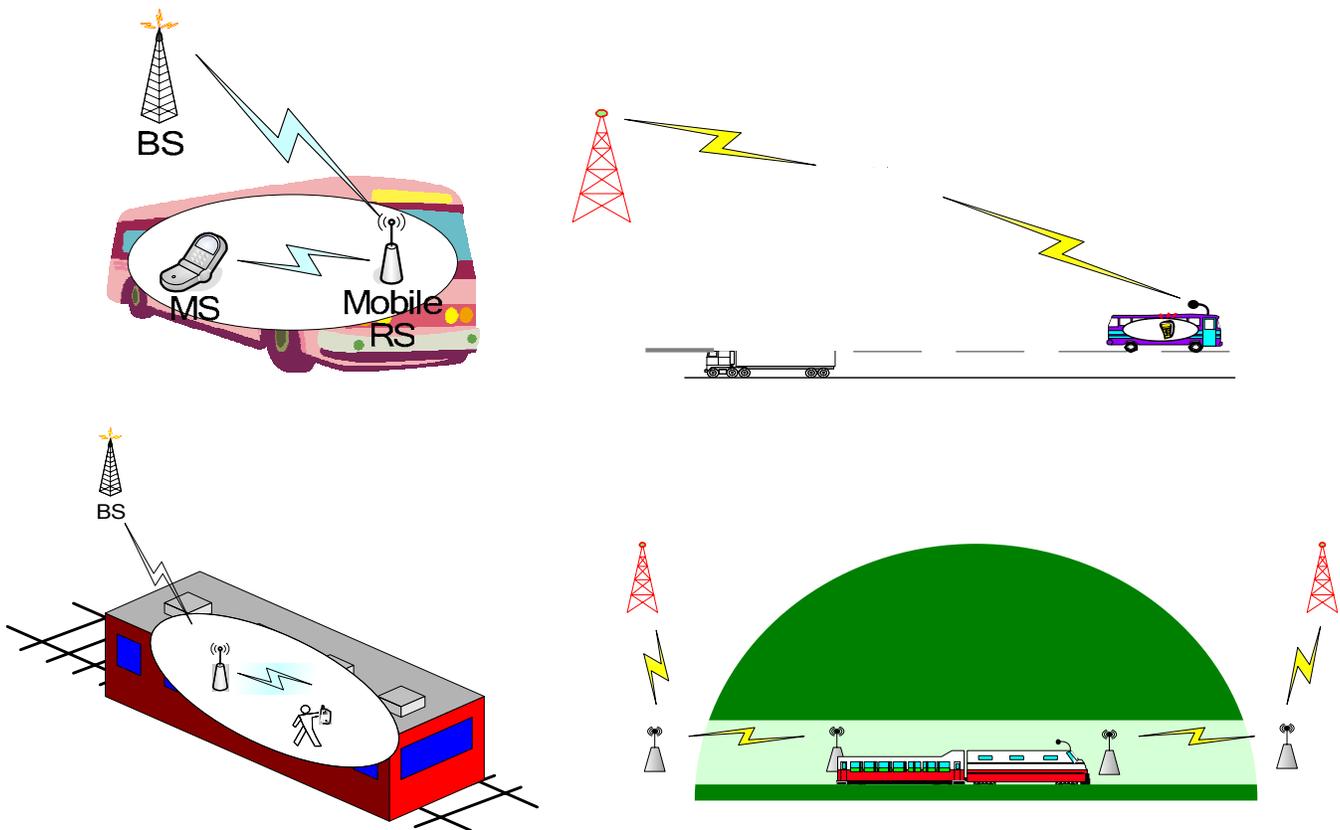


Figure 3 Examples of Coverage on Mobile Vehicle

4 Performance Objectives

The performance objectives of all 802.16j networks are a superset similar to that of those for 802.16e networks. A given deployment is provisioned to provide a given level of service to a given number of users over a given coverage area. This goal applies to all of the usage models described in section 3. In the Fixed Infrastructure Usage Model, MMR-BSs and RSs are deployed to provide coverage at a given level of service within the service area of the network operator. The specific coverage goals, service levels, and capacity needs will vary from deployment to deployment. In the In-Building Coverage Usage Model RSs are deployed to provide coverage and the required amount of capacity within a building. In the Temporary Coverage Usage Model, RSs are deployed to provide a given amount of capacity or coverage in an area where there is a temporary need for service. Finally, in the Coverage on Mobile Vehicle Usage Model, RSs provide coverage onboard the mobile vehicle at some desired capacity. RS may also be used to increase the reliability of a network for example by increasing the typical SINR for a link, or providing different forms of antenna or routing diversity.

The following subsections describe some of the ways in which RSs can be used to achieve these performance objectives.

4.1 Per-User Throughput and/or Capacity and/or Reliability Enhancement

There are two major ways in which 802.16j deployments can increase per-user throughput, ~~and~~ system capacity and reliability. First, RSs can be deployed in order to provide higher SINR to users at the edge of the cell. A single low SINR link is replaced with multiple higher SINR links over which higher order modulation and code rates can be supported. The resulting increase in spectral efficiency produces a capacity increase (part of which is used to transmit data over multiple hops). This additional capacity can be used to provide higher throughput to individual MSs or to support more users within the coverage area of the RS. In addition the increased SINR may be used to improve link reliability. The density of RS nodes may also permit increased routing diversity. For example, traffic from a given MS can be routed so as to avoid a congested RS to RS link or conserve power at a particular node. These may be of particular use in military versions of the usage models.

Second, RSs and MMR-BSs can be deployed in a dense topology (small cells) to improve the capacity within areas covered by the RSs

4.2 Coverage and/or Range Extension

There are several different situations in which MMR-BS and RSs can be used to expand the coverage area of the network. First, RSs can be deployed to provide coverage to users in a coverage hole. RSs are deployed to provide coverage and enhanced throughput to MSs in areas that are in the shadow of a building or other obstruction. The RSs may be deployed in specific locations in a dense urban environment to provide coverage in the valleys between tall buildings.

The second example of coverage extension is provision of coverage in isolated areas that are outside the reach of any BS. In this case RSs are deployed to provide coverage to clusters of MSs that are beyond the perimeter of the MMR-BS coverage area.

The third example of coverage extension is extending coverage to MS riding on mobile vehicles (e.g buses and trains) operating between buildings in a dense urban environment or in tunnels.

For military usage scenario, in addition to the previous examples, military requires relays to extend the range of a BS to vehicles and soldiers. The relays can be mounted on vehicle-based platform (e.g. HUMMV) and aerial-based platform (e.g. UAV). It is also possible that the relay can be carried by soldiers as manpack radios. To reach the destination, a BS may need to go through multiple hops.

5 Topology

The following figure illustrates the types of topological constructs that are possible in the usage models described in section 3. In the figure RS refers to either a fixed, nomadic, or mobile RS. For military scenarios, two or more mobile RS nodes may need to communicate to each other while moving.

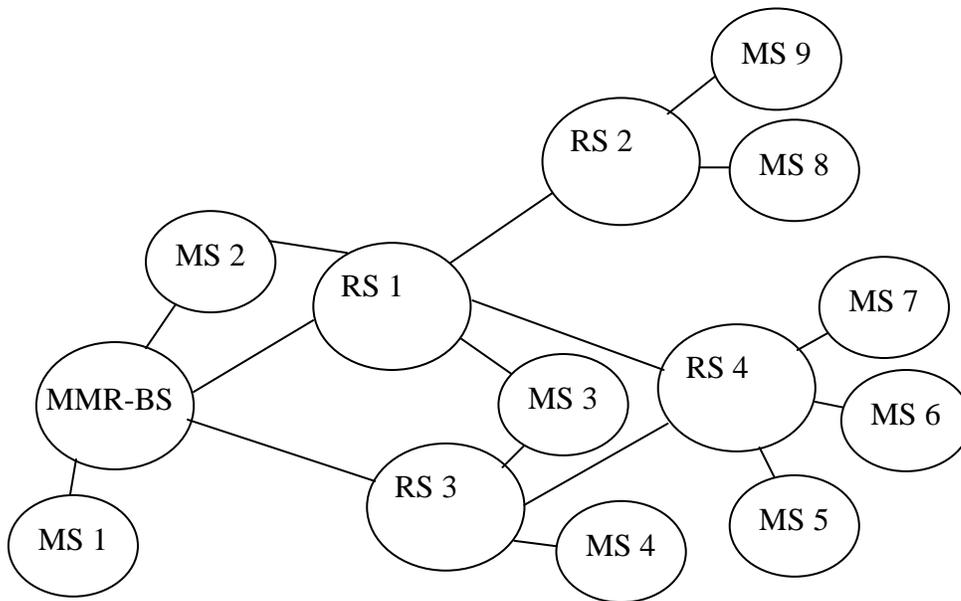


Figure 4 Topological Constructs

5.1 Supported Link Types

The topologies associated with the usage models described in section 3 include the following types of links as illustrated in Figure 4:

- MMR-BS to MS – The MMR-BS can associate with multiple MSs
- RS to MS – RSs can associate with multiple MSs
- MMR-BS to RS – The MMR-BS can associate with multiple RSs.
- RS to RS – RSs can associate with multiple RSs.

5.2 Number of Hops

It is expected that in most deployments the majority of routes will be 2 hops in length. However, routes that are greater than 2 hops in length will exist in all usage models. Some examples are multihop routes to provide coverage to a remote cluster of users, multihop routes to provide access to users in a tunnel, and multihop routes to provide coverage to an area in the shadow of a large building or other obstruction.

5.3 Types of Routes

Downlink and uplink communications between the MMR-BS and MS can occur via either symmetric routes (the same route for DL and UL communications) or via asymmetric routes (different routes for the DL and UL). Some reasons to utilize asymmetric routes are to provide enhanced DL service such as broadcast TV, or to enhance the UL service to reduce transmission power requirements of subscriber station devices.

In most of the usage models described in section 3 the topology will allow multiple RSs and the MMR-BS to be within communication range and therefore potentially communicate with one another. In these topologies multiple routes between the MMR-BS and an MS will be possible. An example of multiple routes is shown in

Figure 4 where there are two routes between the MMR-BS and MSs 5, 6, and 7, served by RS4 (one through RS 1 and one through RS3). ~~It should be noted that even when multiple routes are enabled between the RSs, the overall topology is still tree-like because all data communications are between the MMR-BS and MSs and this usage does not violate the scope as defined in the 802.16j PAR.~~ Another example of multiple routes between the MMR-BS and MS is show in Figure 4 where MS2 can be accessed directly from the MMR-BS and also from RS1.

6 RS Characteristics

6.1 Mobility

RS Mobility

- Fixed
 - Nomadic
 - RS can be moved to a location, positioned for operation and turned on.
 - Usage models do not call for battery operated nomadic RSs.
 - Mobile
 - In the case of a mobile platform like a train, RS moves along a known trajectory
 - In the case of a mobile platform like a ship or bus, trajectory is similar, but not always precisely the same
- ~~Usage models do not call for battery operated mobile RSs.~~

For military usage scenario, the relay can be stationary, communication at the halt (i.e., nomadic) or communication on the move (i.e. mobile). For communication on the move, the relay can be on a vehicle-based platform, aerial-based platform, or man-pack. Manpack platforms require the use of battery. High power efficiency is essential for many platforms in the military usage scenario.

6.2 Ownership

- Infrastructure Provider owned
- Customer Owned
 - Operated by customer to provide coverage for their use (e.g., within their building)
 - Used by provider to provide coverage for other customers (e.g., when RS is deployed with a stationary client device).

6.3 Antenna usage

The usage models described in section 3 do not call for the use of specific types of antennas and thus do not limit the types of antennas that can be deployed by relay stations. Some examples of antennas that might be deployed on RSs are: omnidirectional, sectorized, and directional. Antenna arrays might also be deployed. This list of antenna types is not intended to be exhaustive. It is provided for the sake of example and is not intended to limit the types of antennas that might be used in RSs.

For military usage scenario, antenna height may be significantly less than commercial deployments due to security concern, area of operation and amount of infrastructure available.

7 Summary

The following table summarizes the key characteristics of the usage models relative to performance objectives, topology and RS characteristics.

Model	Perf Obj	Topology			RS Characteristics			
		Link Types	Hops	Route Types	Mobility	Ownership	Complexity	Antenna Types
Fixed Infrastructure	Coverage, capacity, range	BS-FRS BS-MS FRS-MS FRS-FRS	2 or more	all	Fixed	Provider, Client	Simple to complex	all
In Building Coverage	Coverage capacity	BS-FRS BS-NRS BS-MS FRS-MS NRS-MS FRS-FRS NRS-NRS NRS-FRS	2 or more	all	Fixed, Nomadic	Provider, Client	Simple	all
Temporary Coverage	Coverage, capacity, range	BS-FRS BS-NRS BS-MS FRS-MS NRS-MS FRS-FRS NRS-NRS NRS-FRS	2 or more	all	Nomadic	Provider	Simple to Complex	all
Coverage on Mobile Vehicle	Coverage, capacity, range	BS-FRS BS-MRS BS-MS FRS-MS MRS-MS FRS-FRS MRS-MRS MRS-FRS	2 or more	all	Mobile	Provider	<u>Simple to Complex</u>	all