

IEEE P802.3dg Downshift/Upshift State Diagram Fix

Peter Jones, Cisco Systems

October 2025

98D.2 Detailed functions and state diagrams

Add the following variables to the list in 98D.2.2 Variables.

`link_status_ok_transition`

Variable set as TRUE when the value of `link_status[HCD]` changes from any state to OK and set FALSE otherwise.

`restart_timer_done_transition`

Variable set as TRUE when `ds_restart_timer_done` changes from deasserted to asserted and set FALSE otherwise.

`transmit_disable_true_transition`

Variable set as TRUE when the value of `transmit_disable` changes from false to true and set FALSE otherwise.

`upshift_timer_done_transition`

Variable set as TRUE when `ds_upshift_timer_done` changes from deasserted to asserted and set FALSE otherwise.

Figure 98D-1—Downshift state diagram

Replace Figure 98D-1 with the following (additions/changes marked with underline):

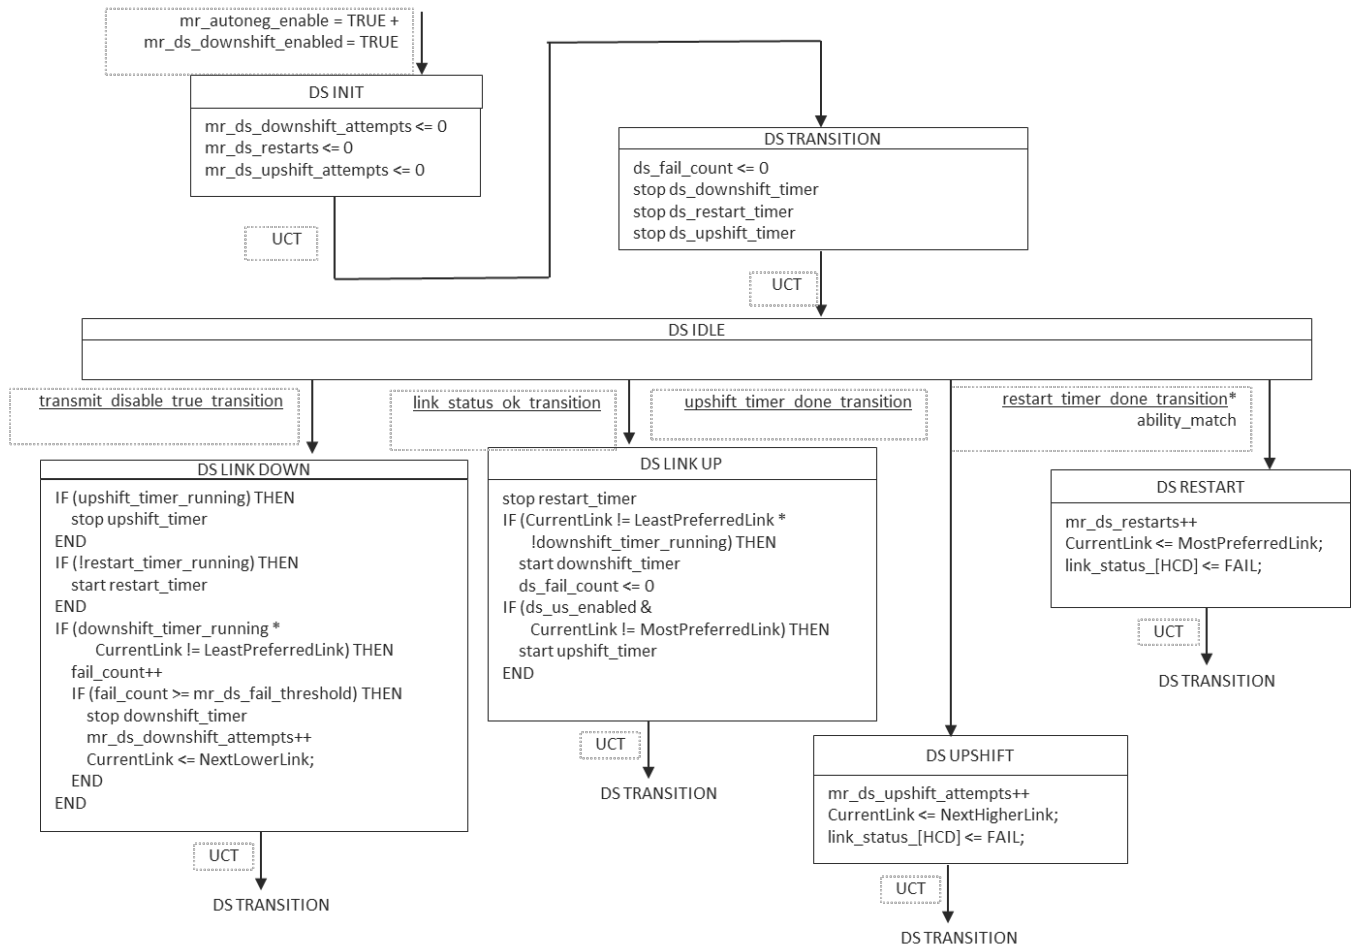


Figure 98D-1 Downshift state diagram

End of Document